 



# quadra skid assembly

installation manual

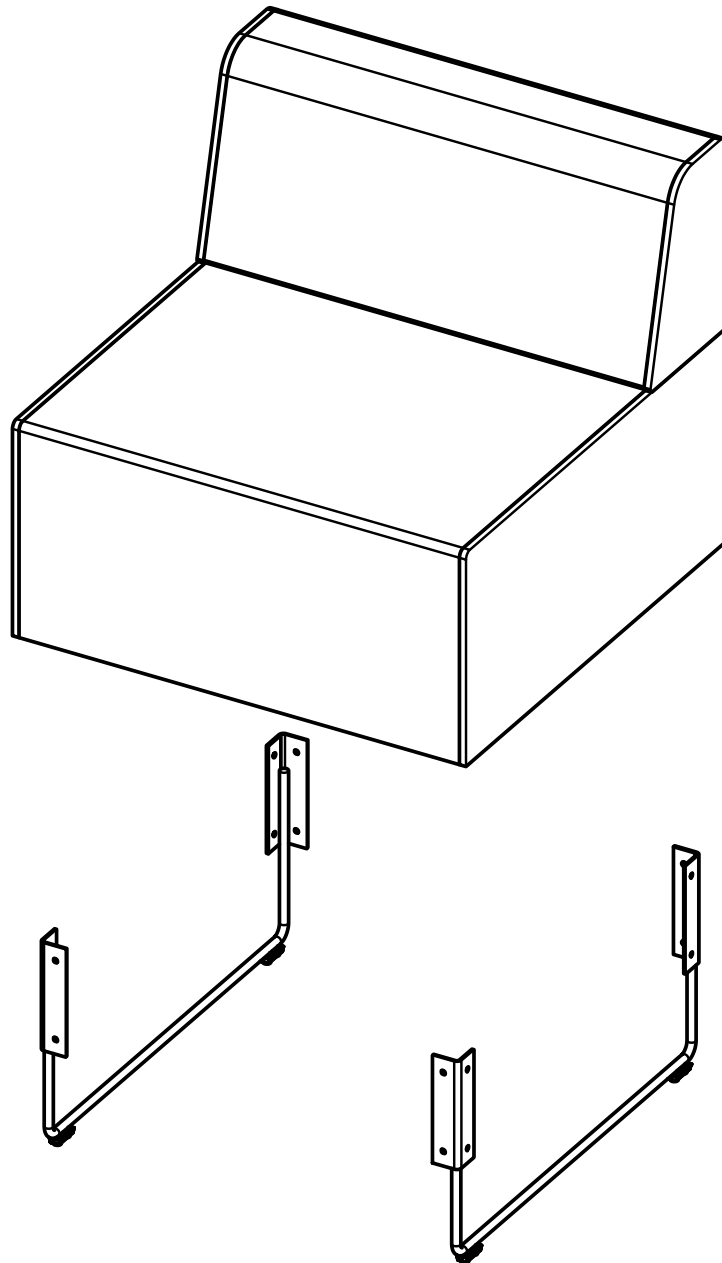


**bejot:**

 
# Parts

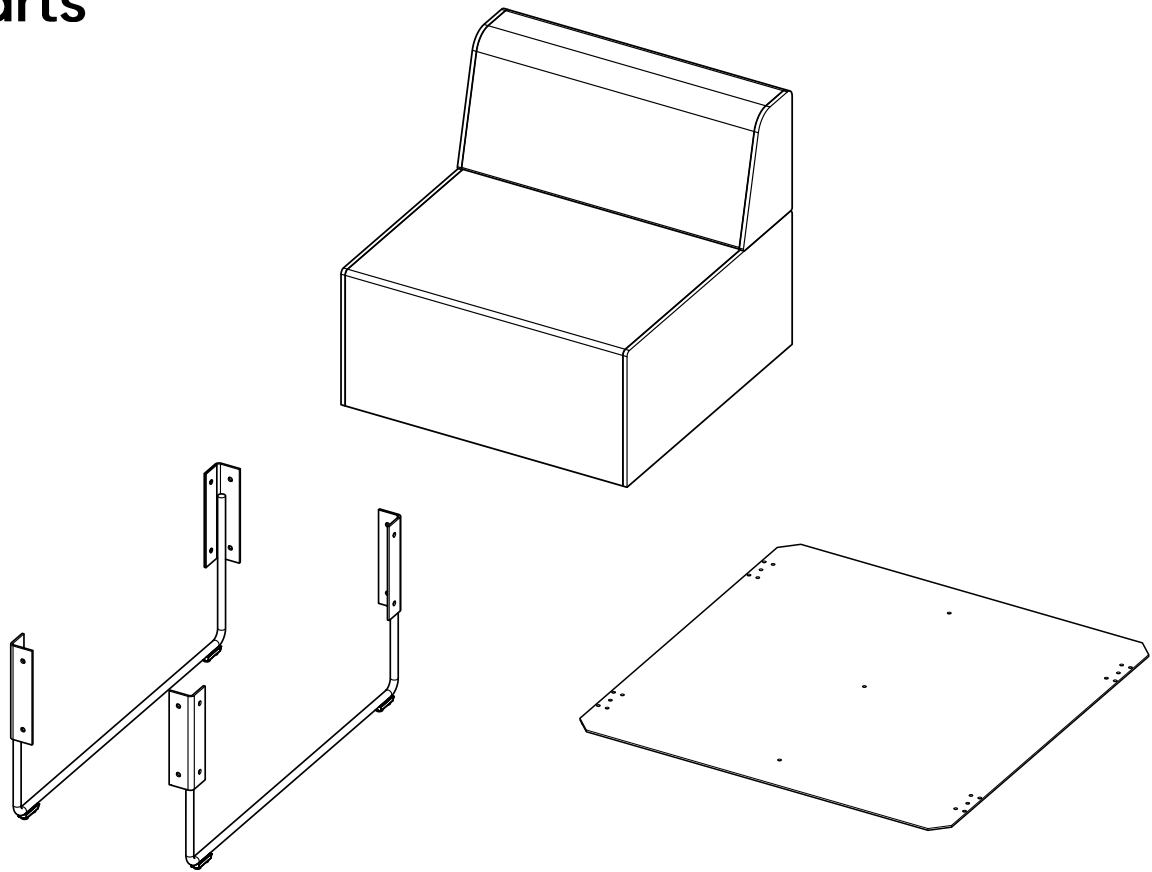


# Attached

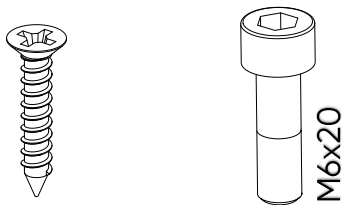 


# Tools

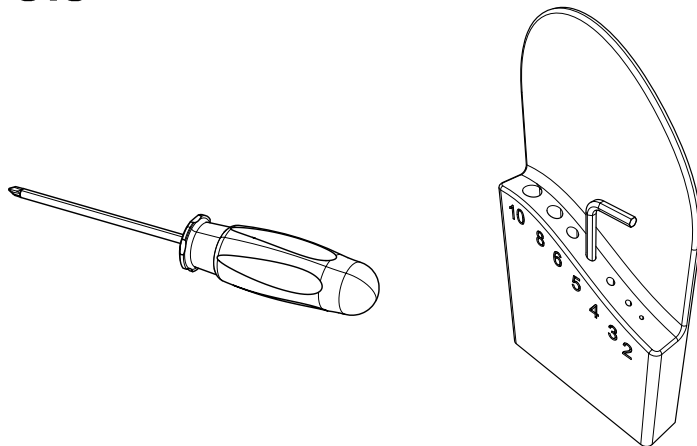 




1

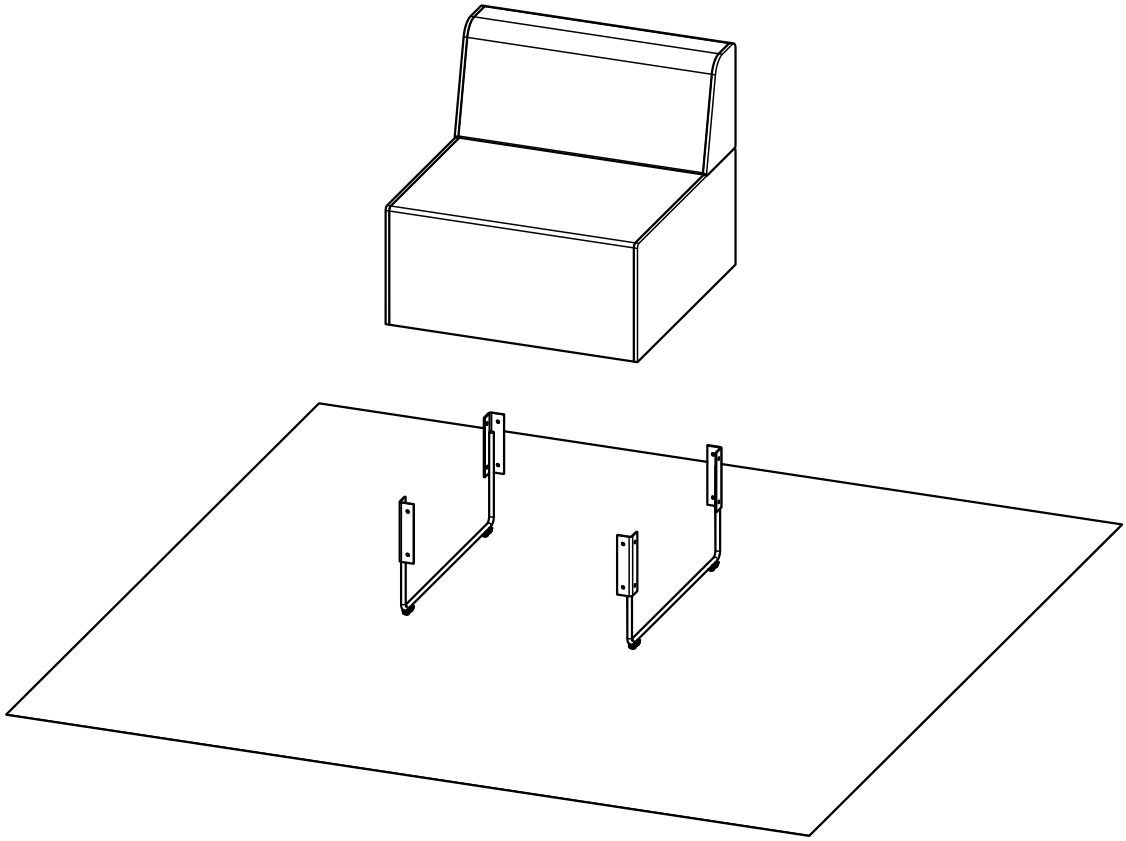 





2

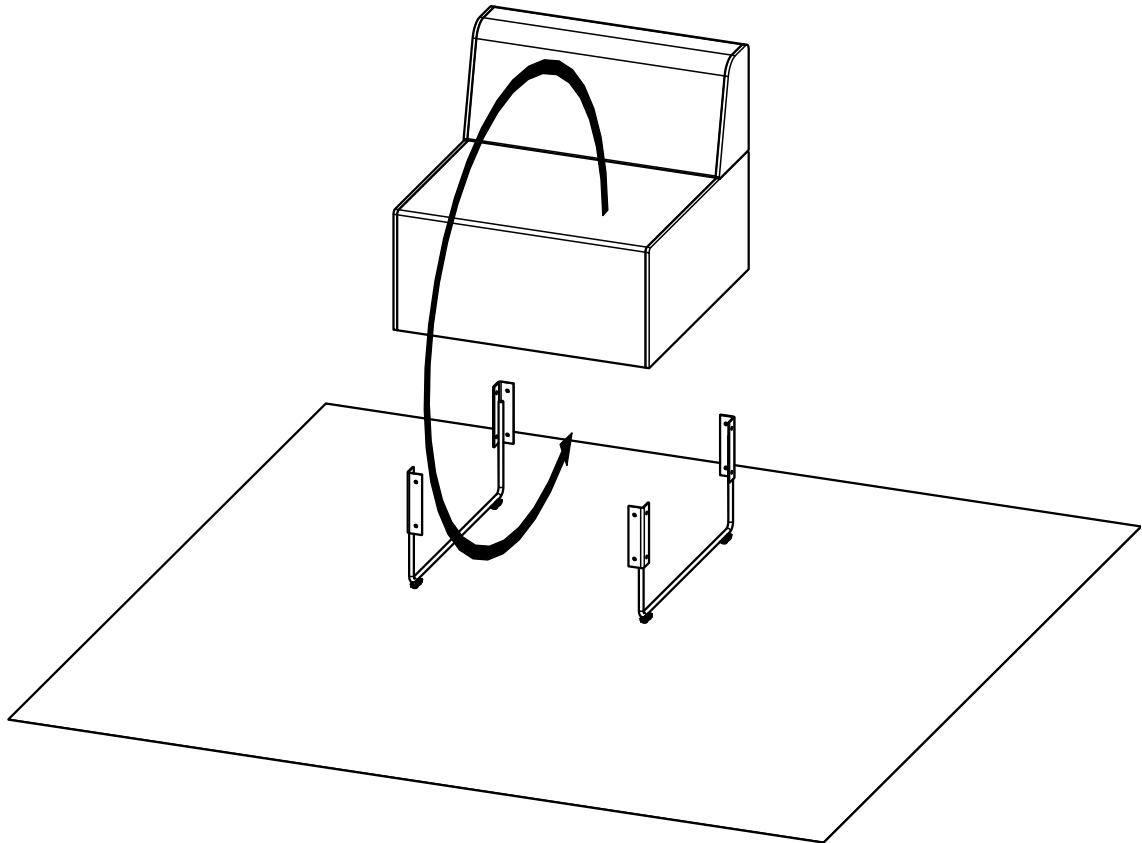 


3

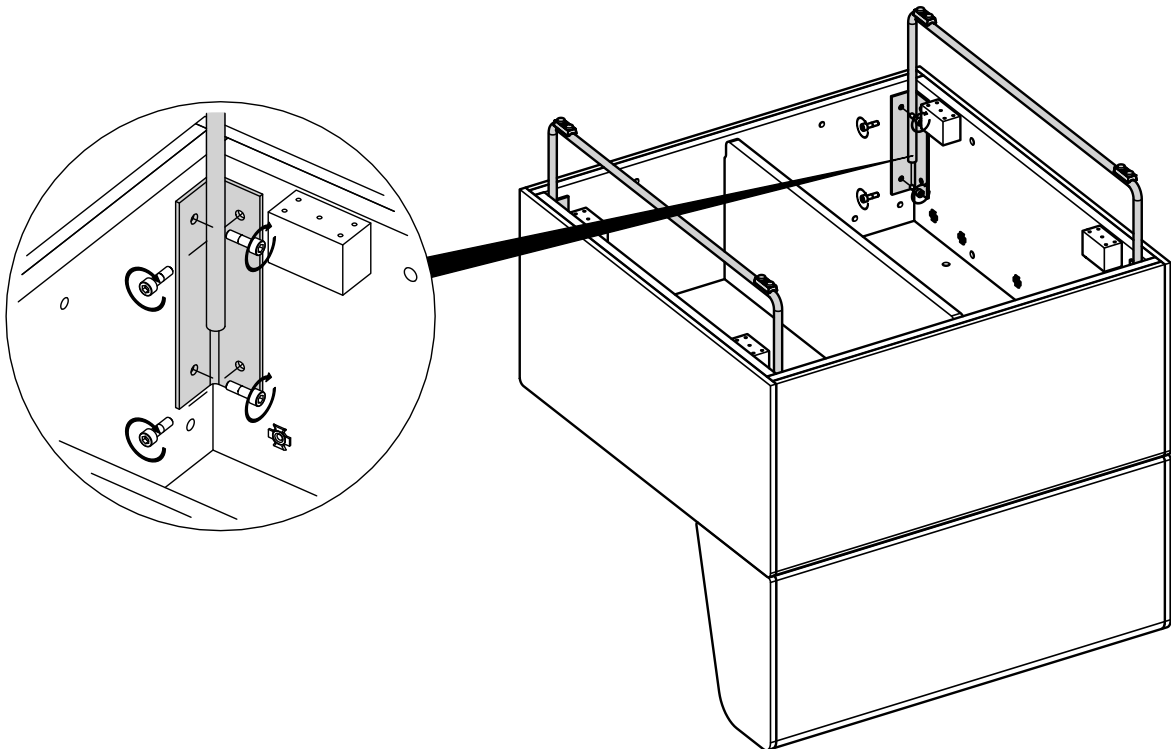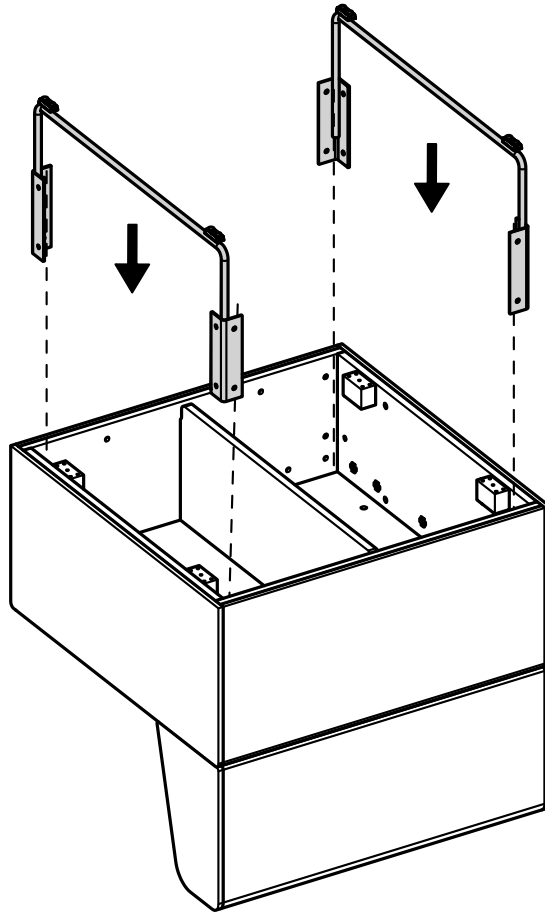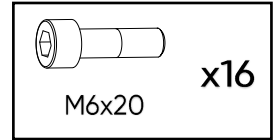   

4

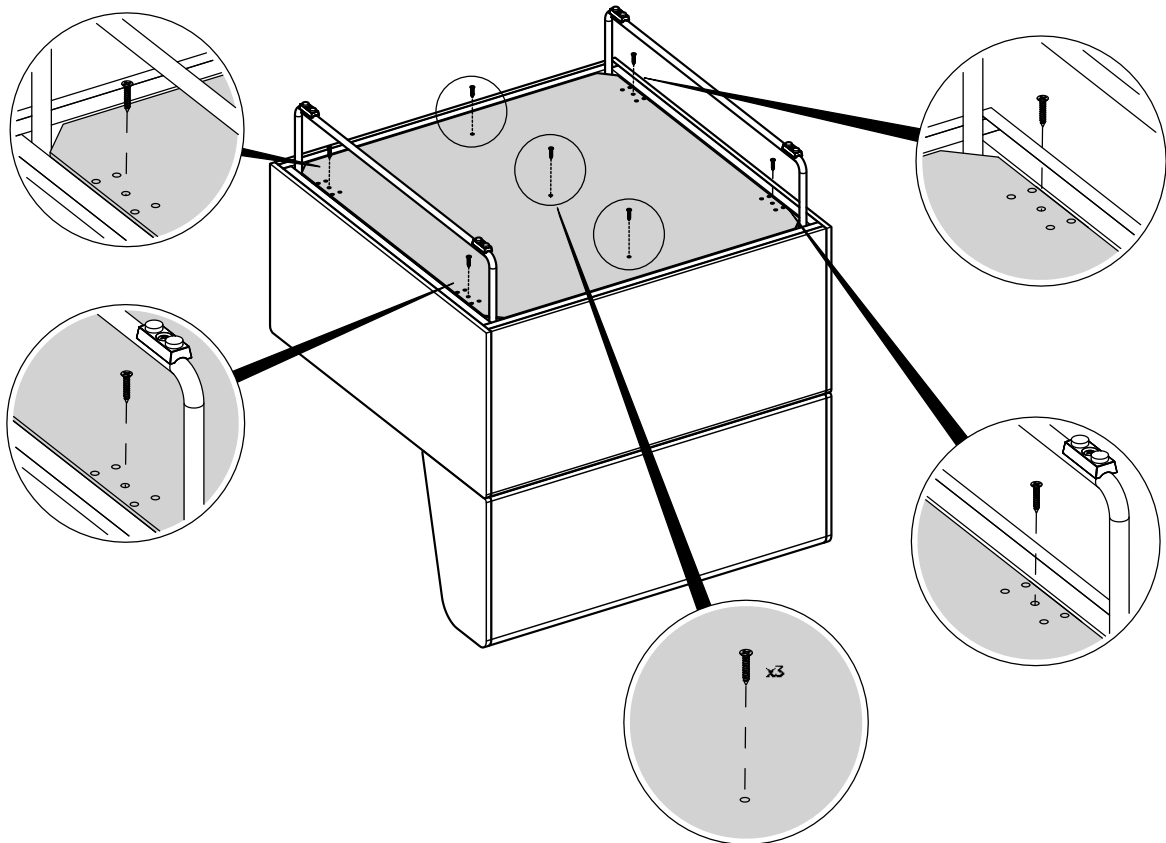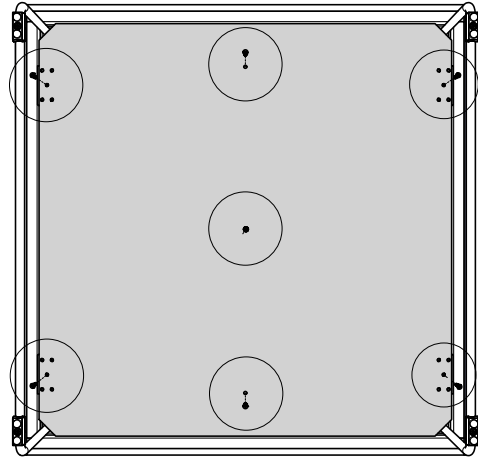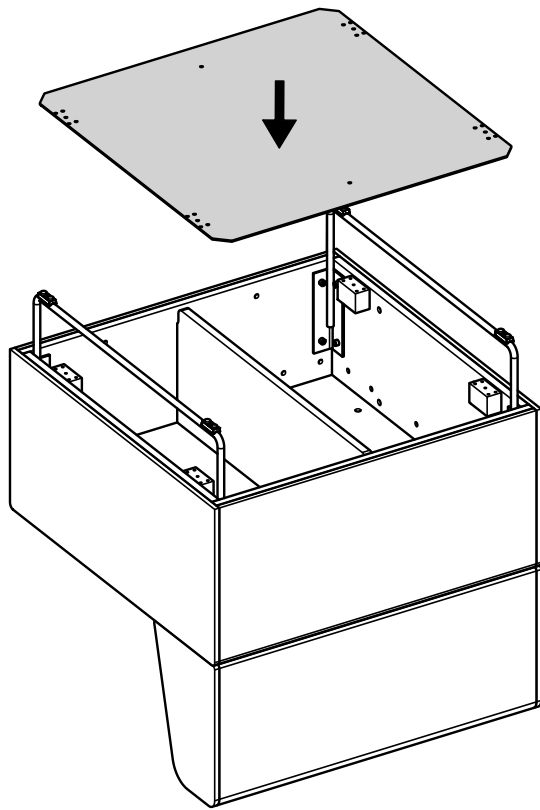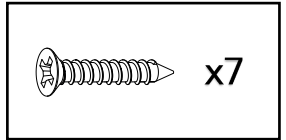    

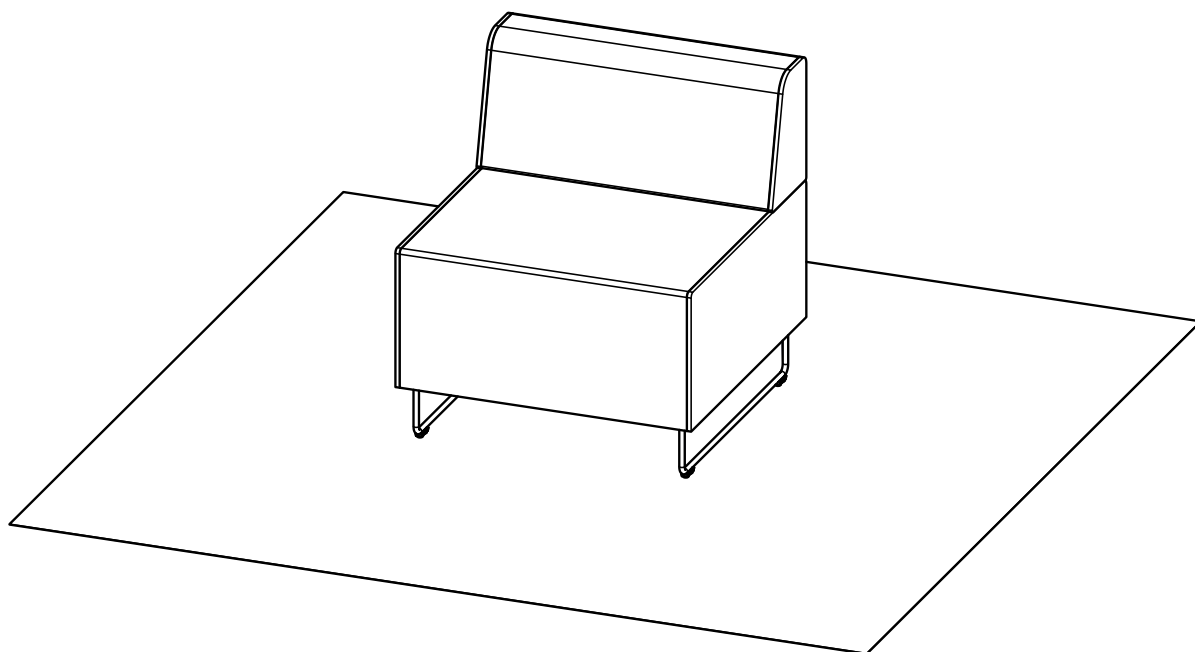 

**Bejot Sp. z o. o.**

ul. Wybickiego 2A, Manieczki, 63-112 Brodnica n. Poznania, POLAND

tel.: +48 (61) 281 22 25, e-mail: [biuro@bejot.eu](mailto:biuro@bejot.eu)

[www.bejot.eu](http://www.bejot.eu)

edition 07/2021