 


social swing double

 
SSD BASE

installation manual

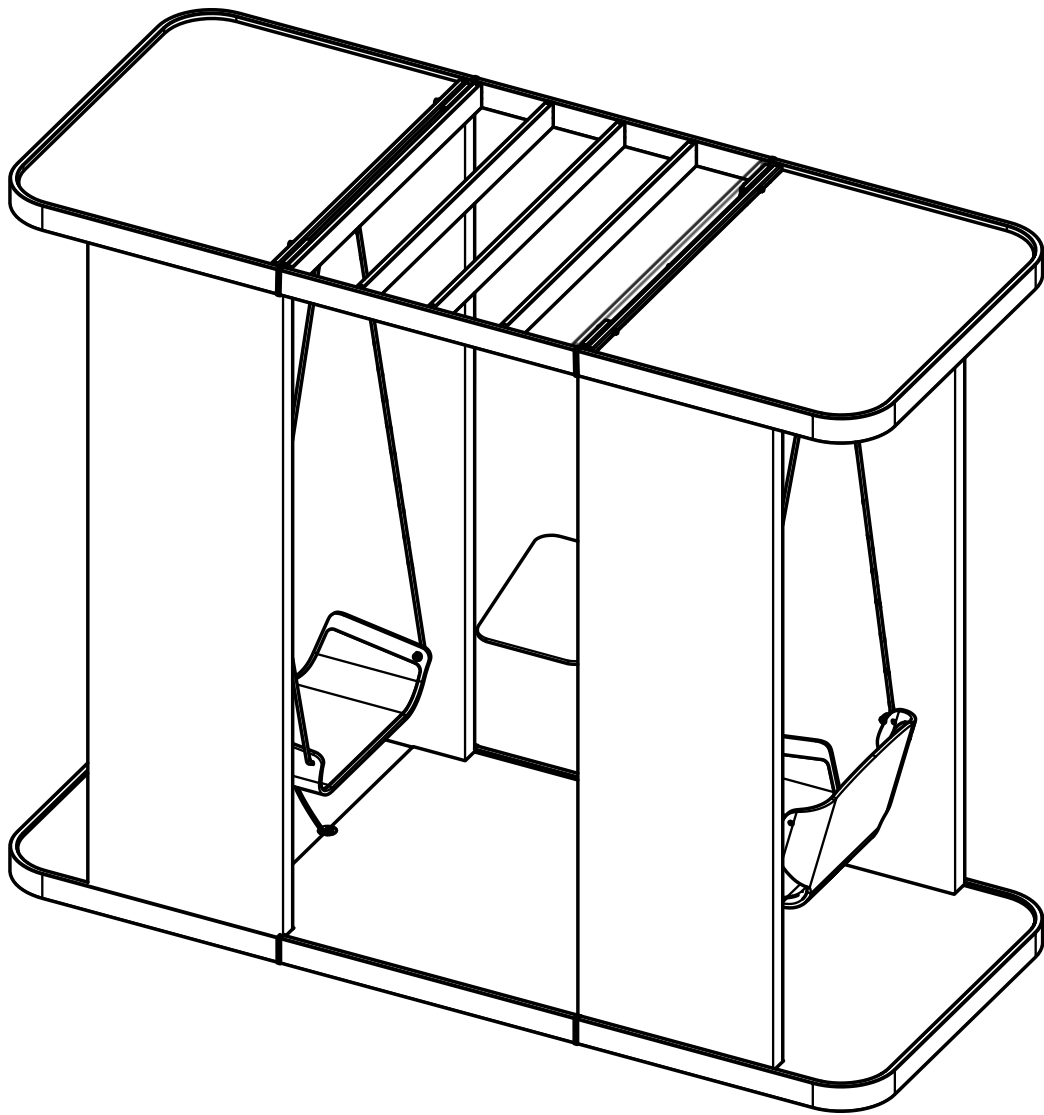


bejot:


1

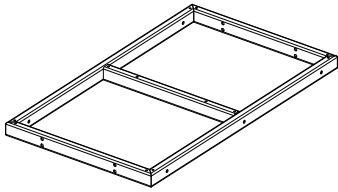


2

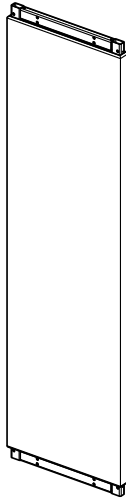 


3

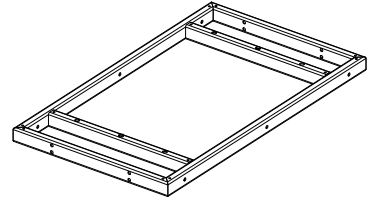 


4

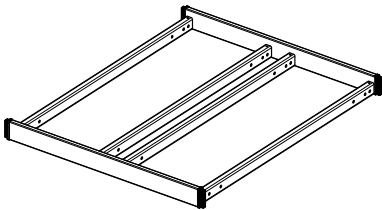 


5

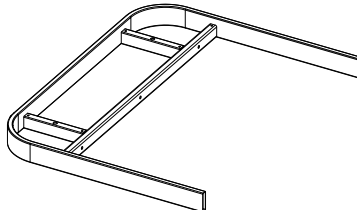 


6

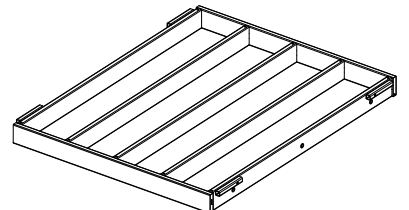 


7

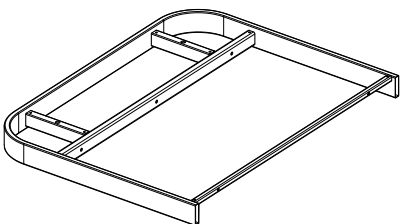 


8

 


9

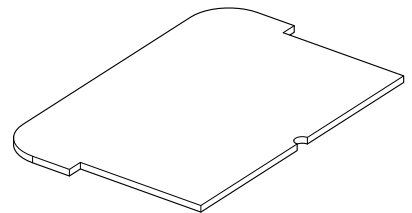 


10

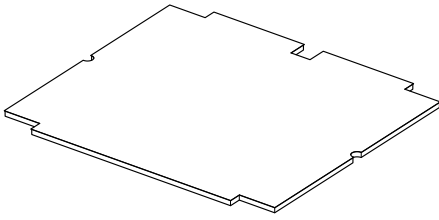 


11

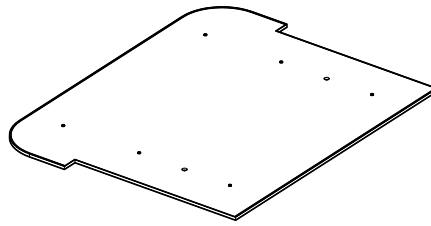 

12

 


13

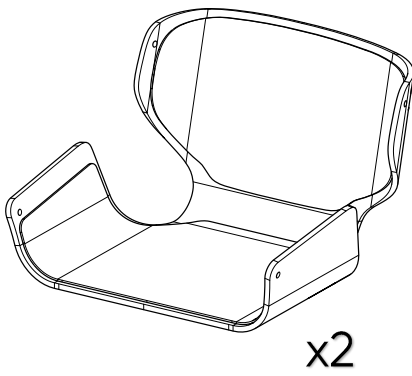 


x2

 14

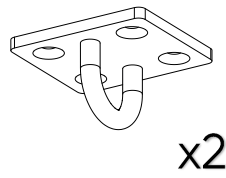


x2

 15

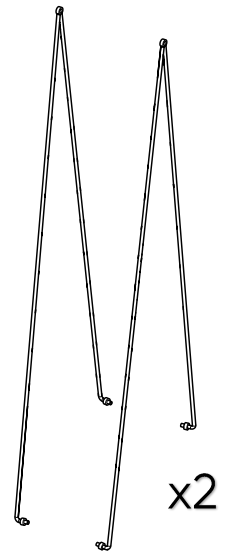


x2

 16

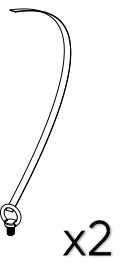


x2

 
17

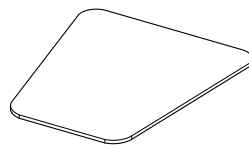


18

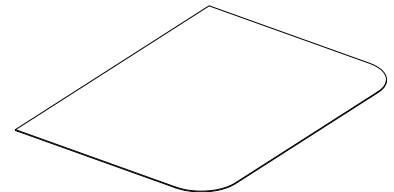 



PEOPLE

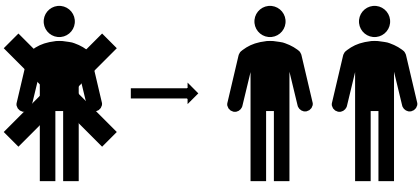 


ADDITIONAL TOOLS

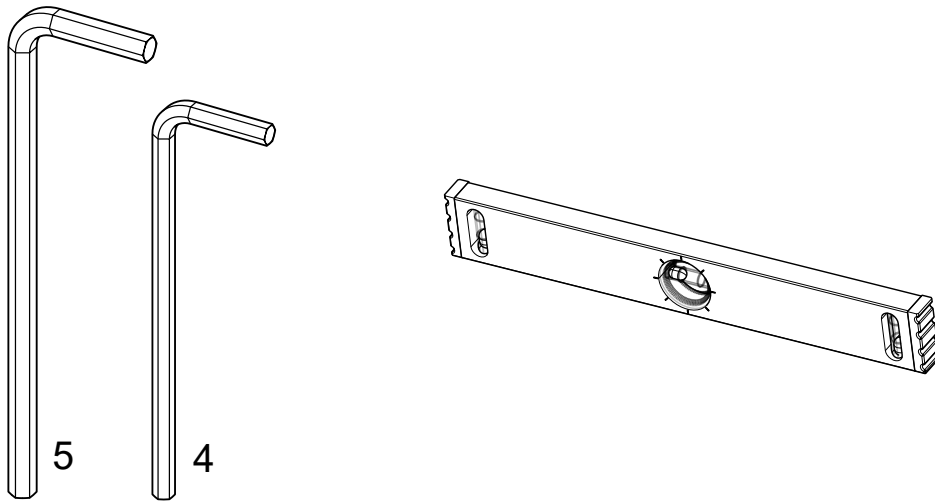 



ATTACHED

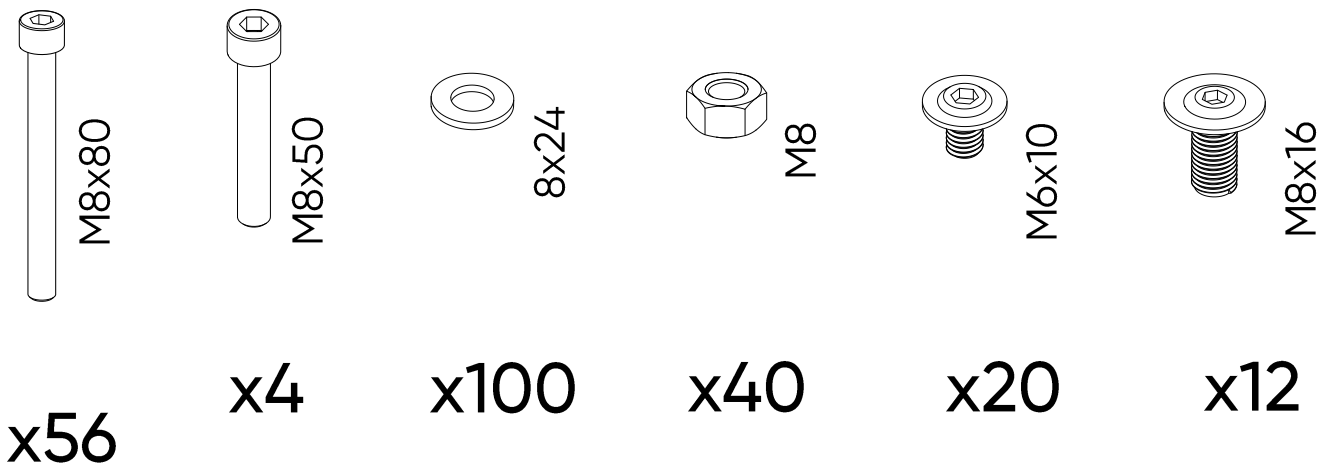  

1

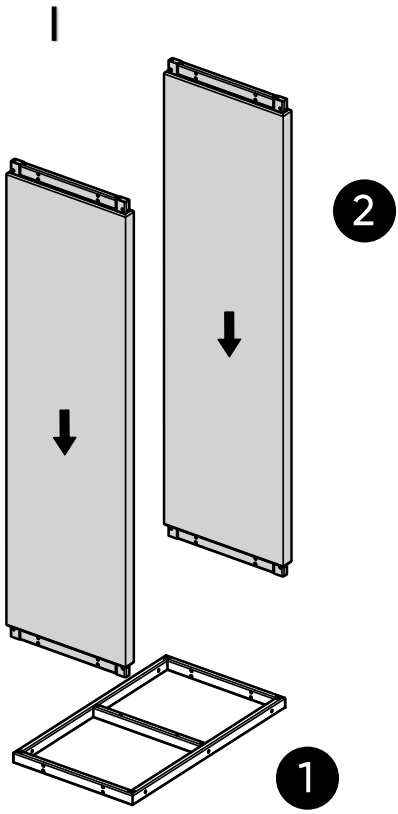 


II

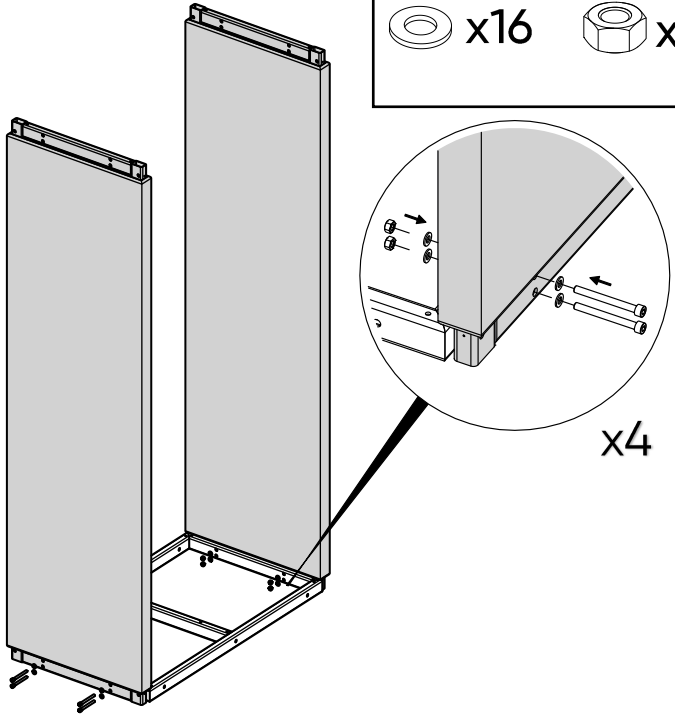 
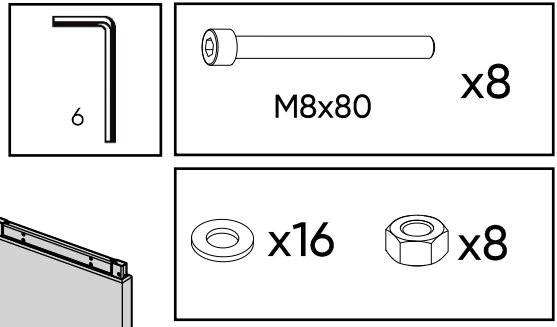 


x4

 2

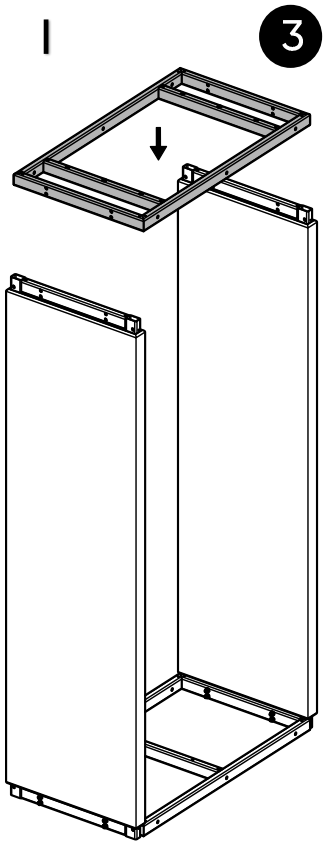


II

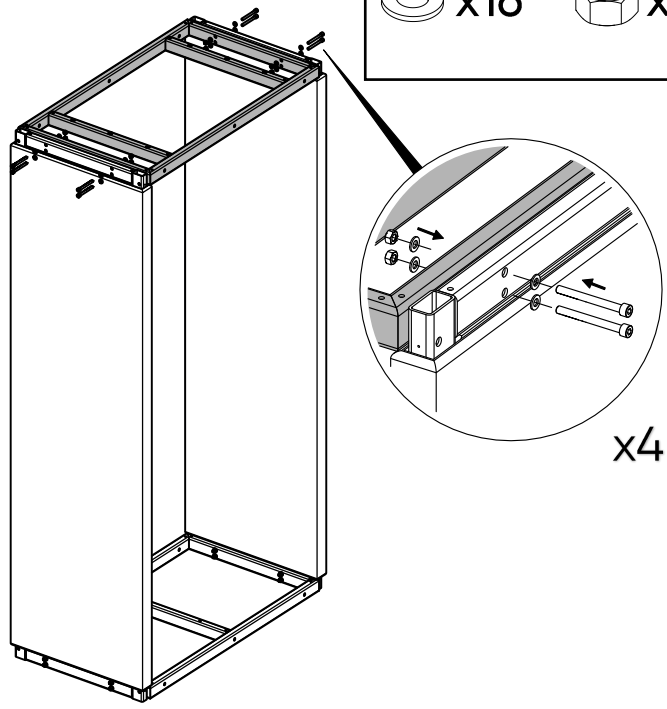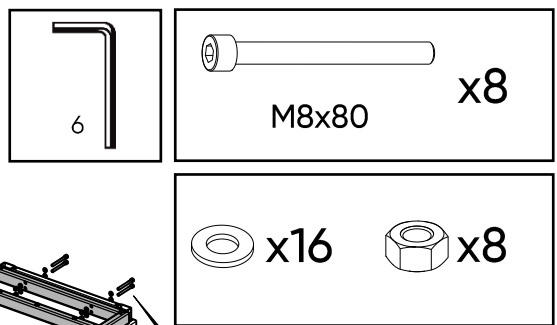  





x4

3

 
I

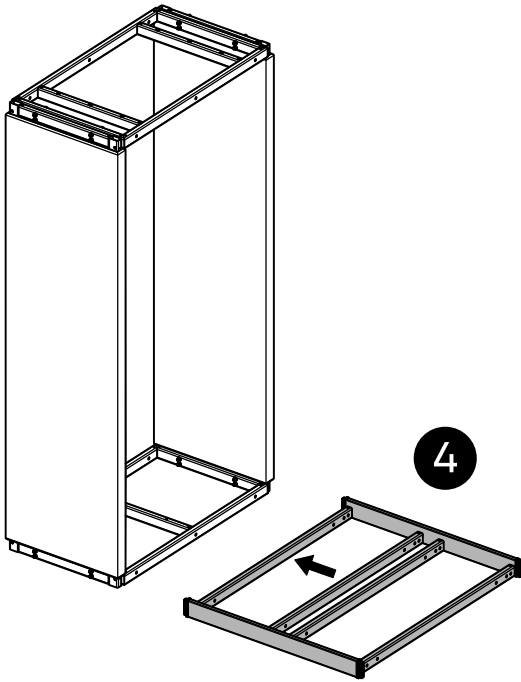


II

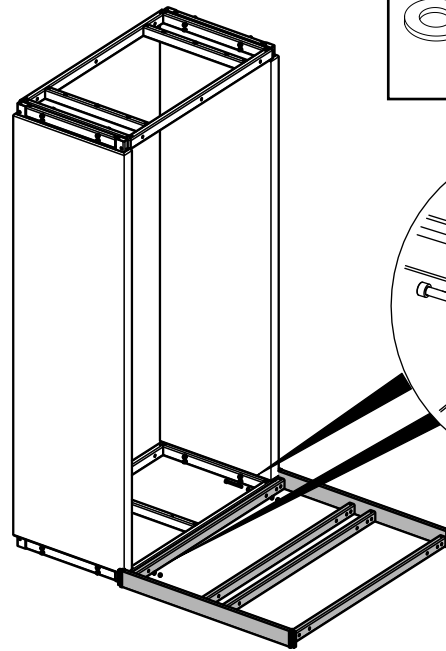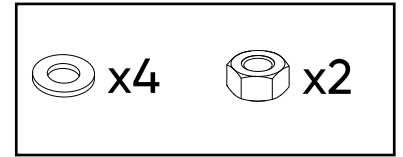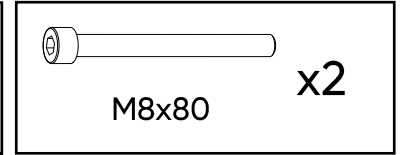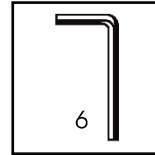    


4

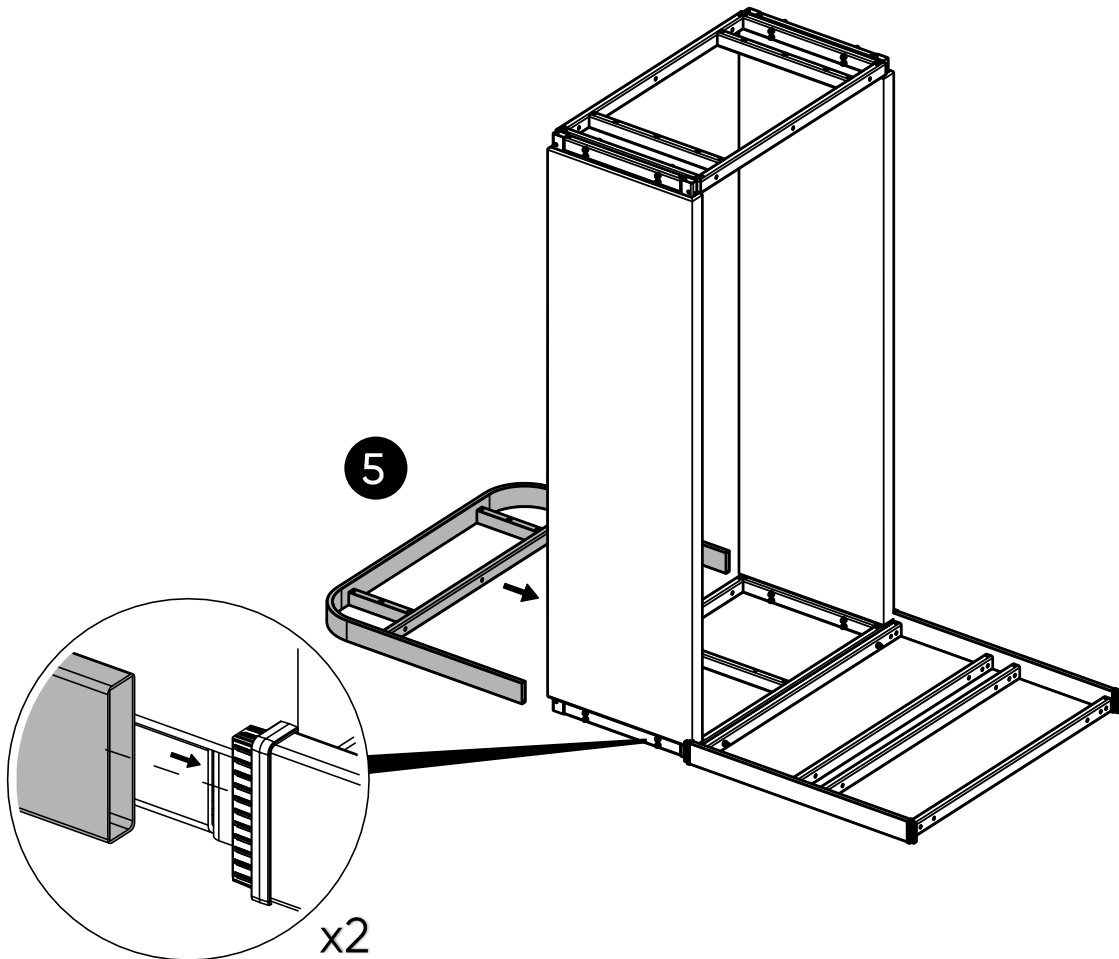 






5

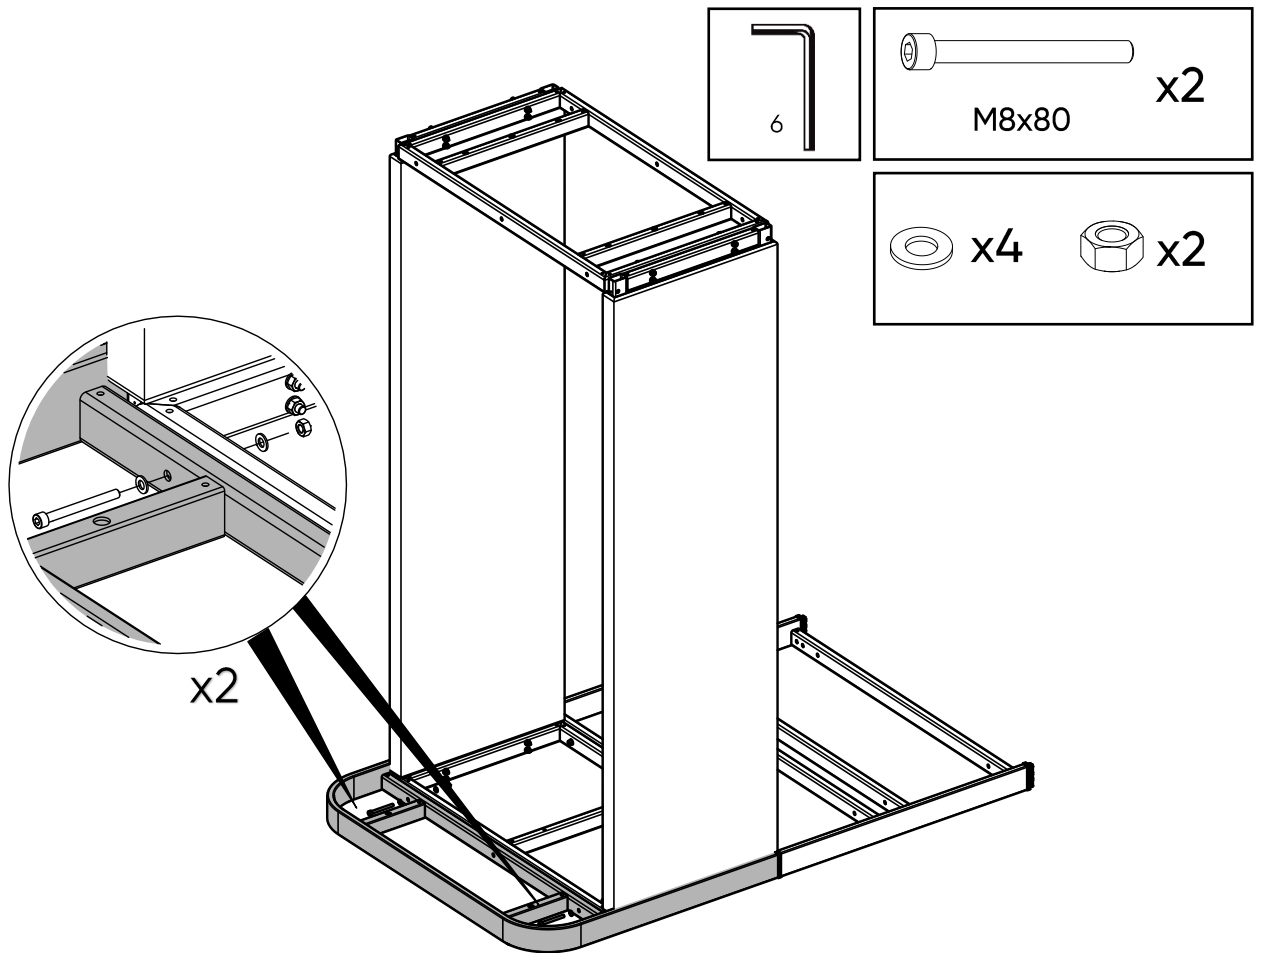 


6

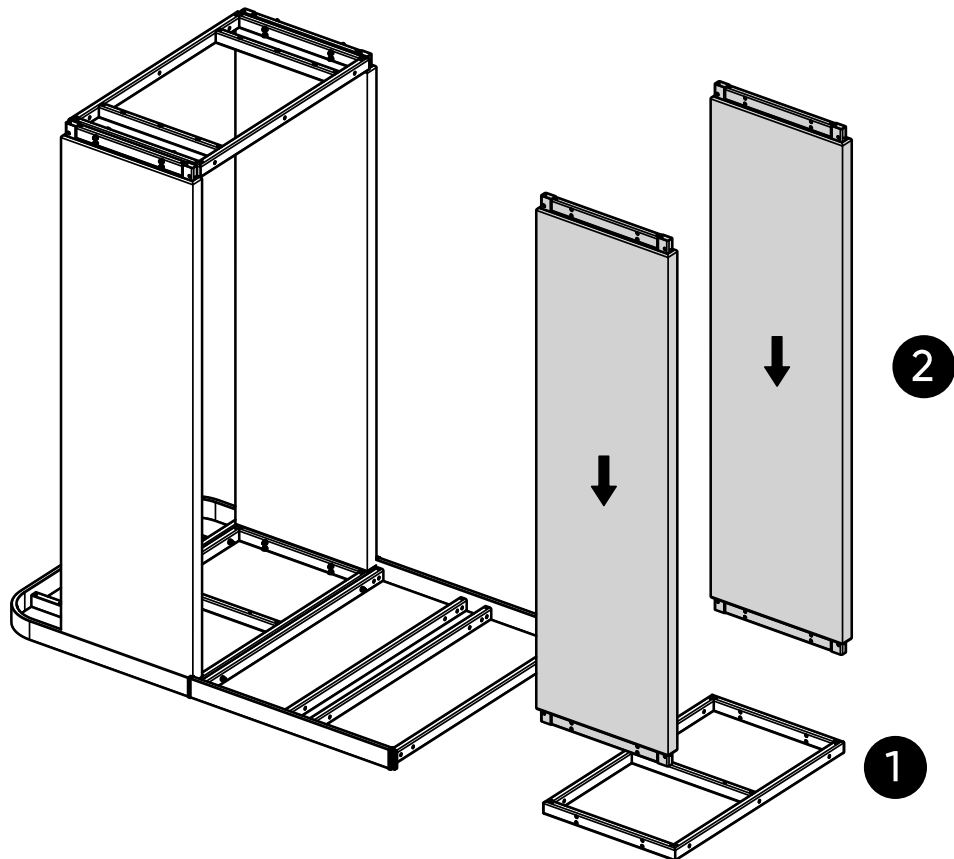 

7

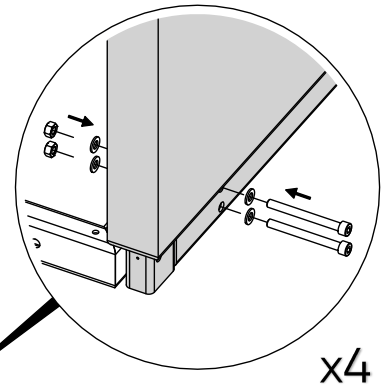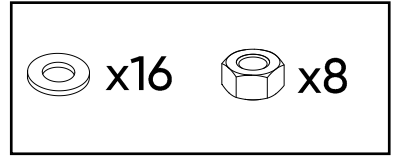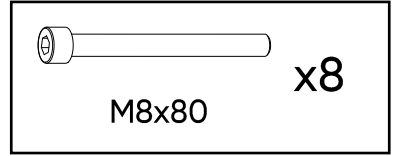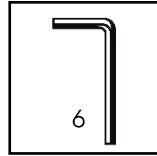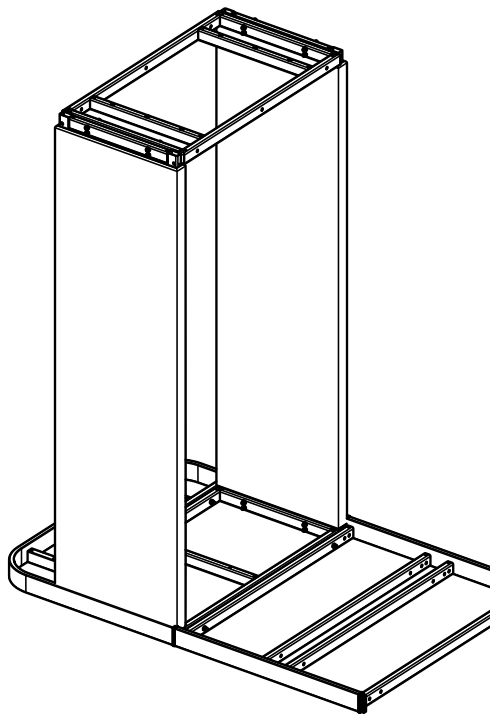     


8

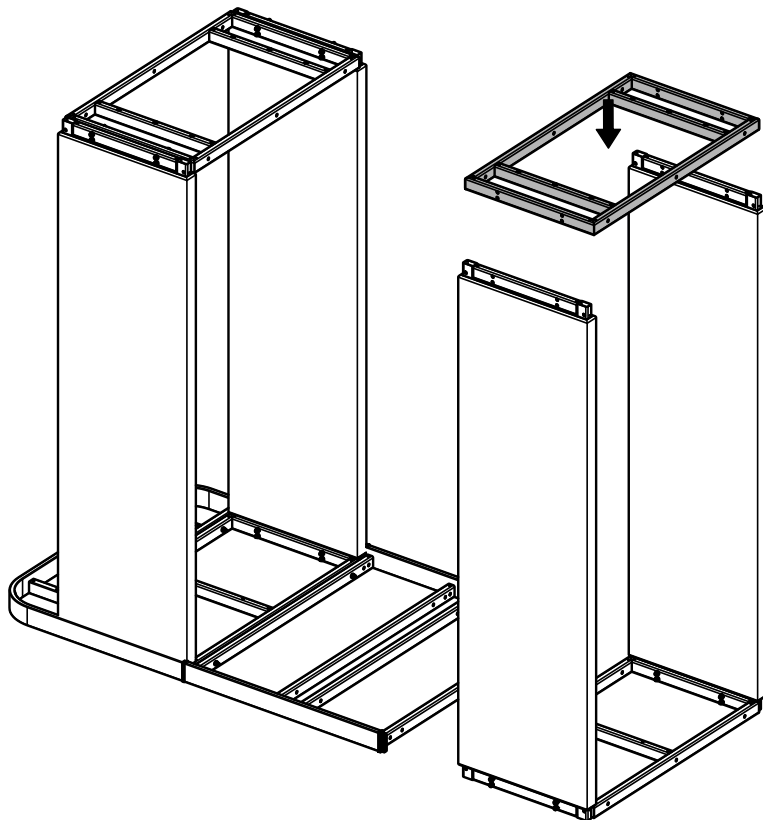 


3

 
9

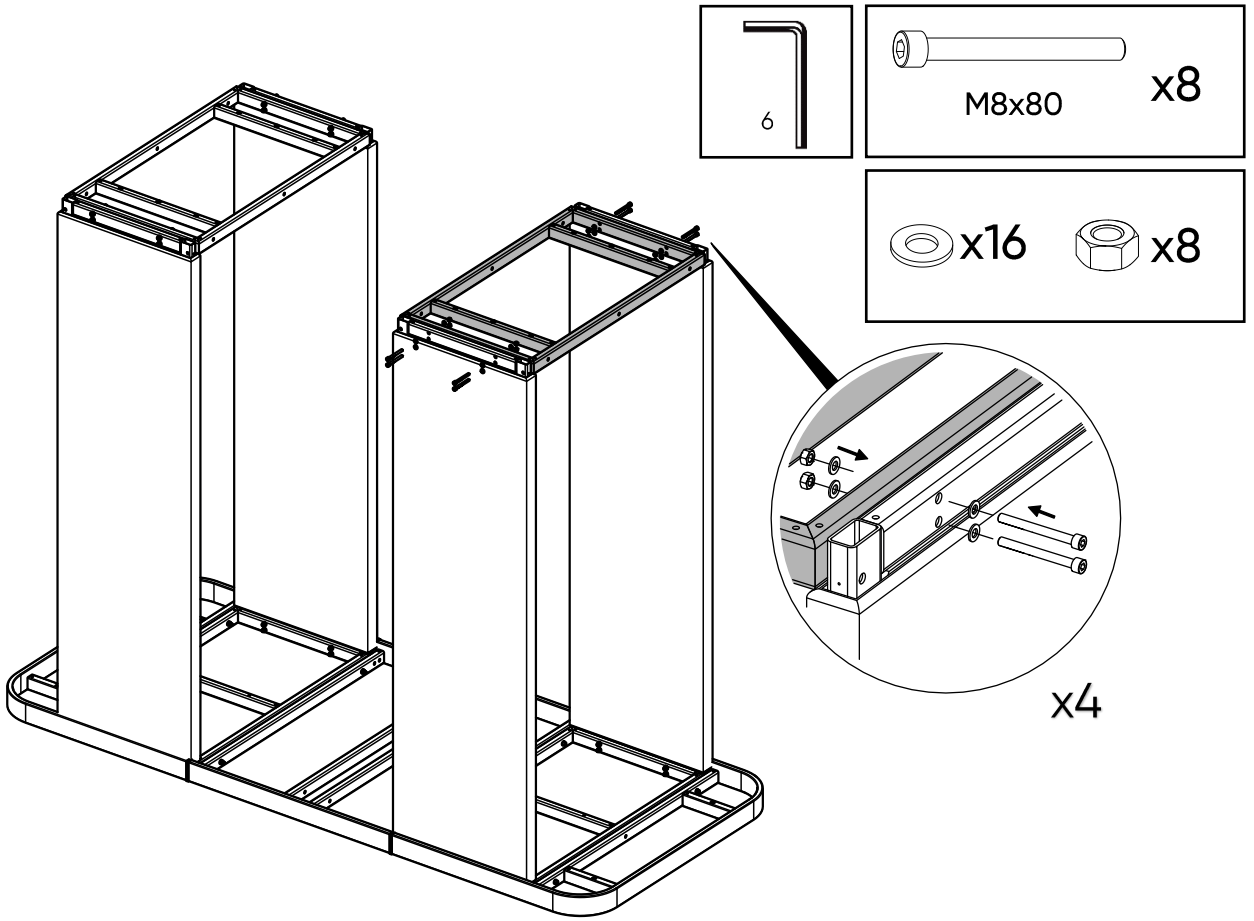


10

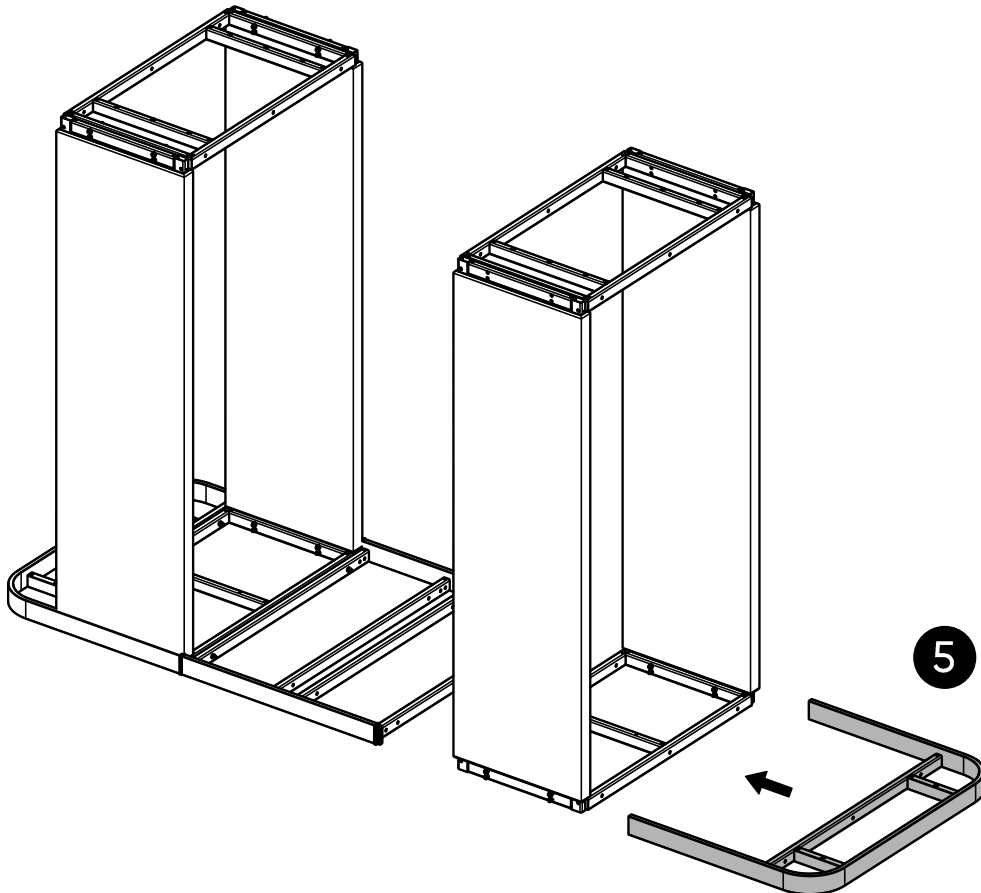 


11

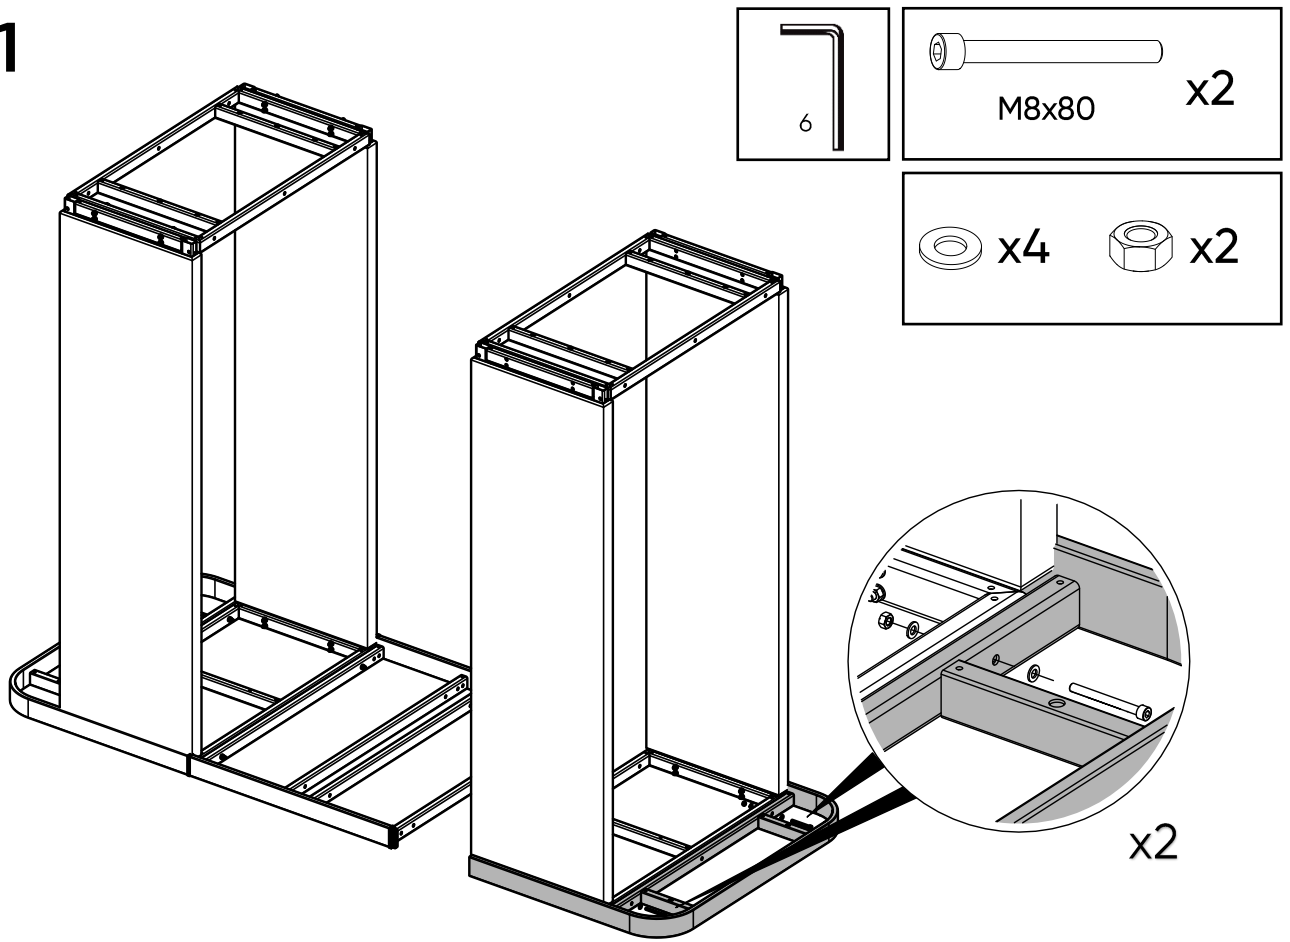 


12

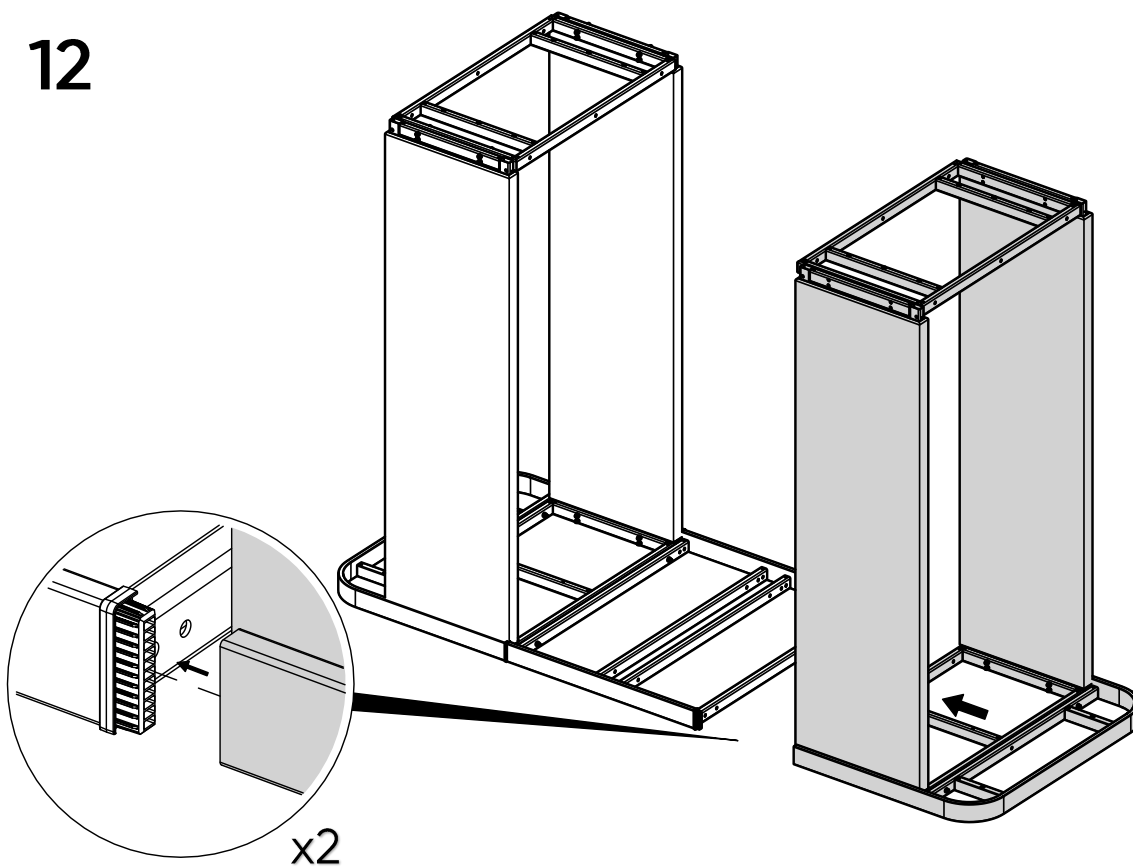 



13

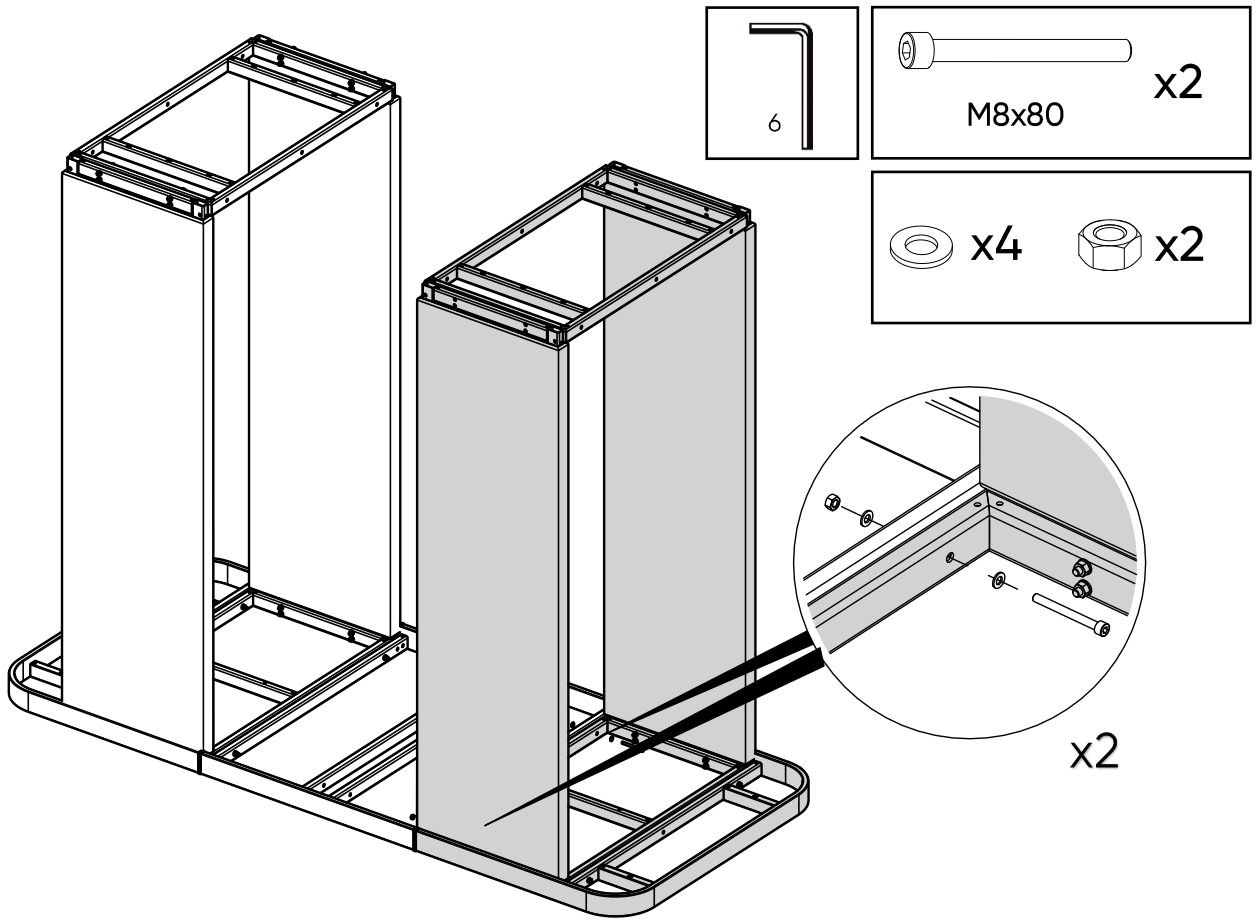 


14

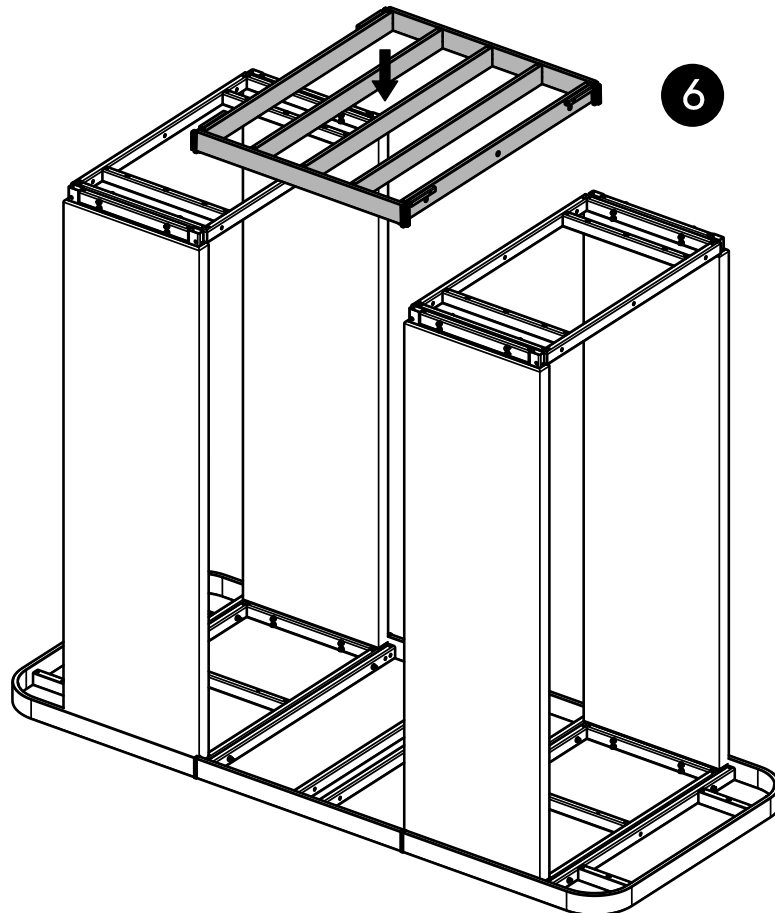 




15

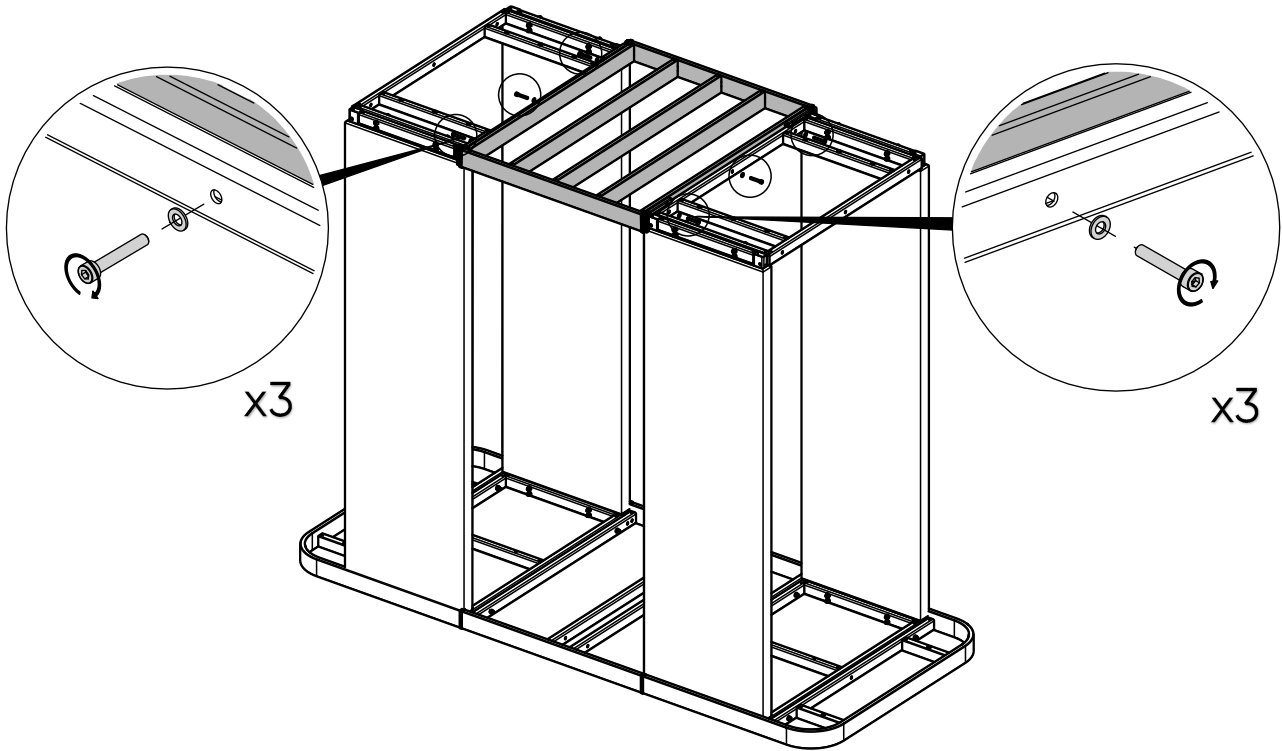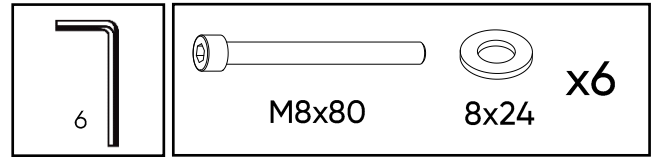  


16

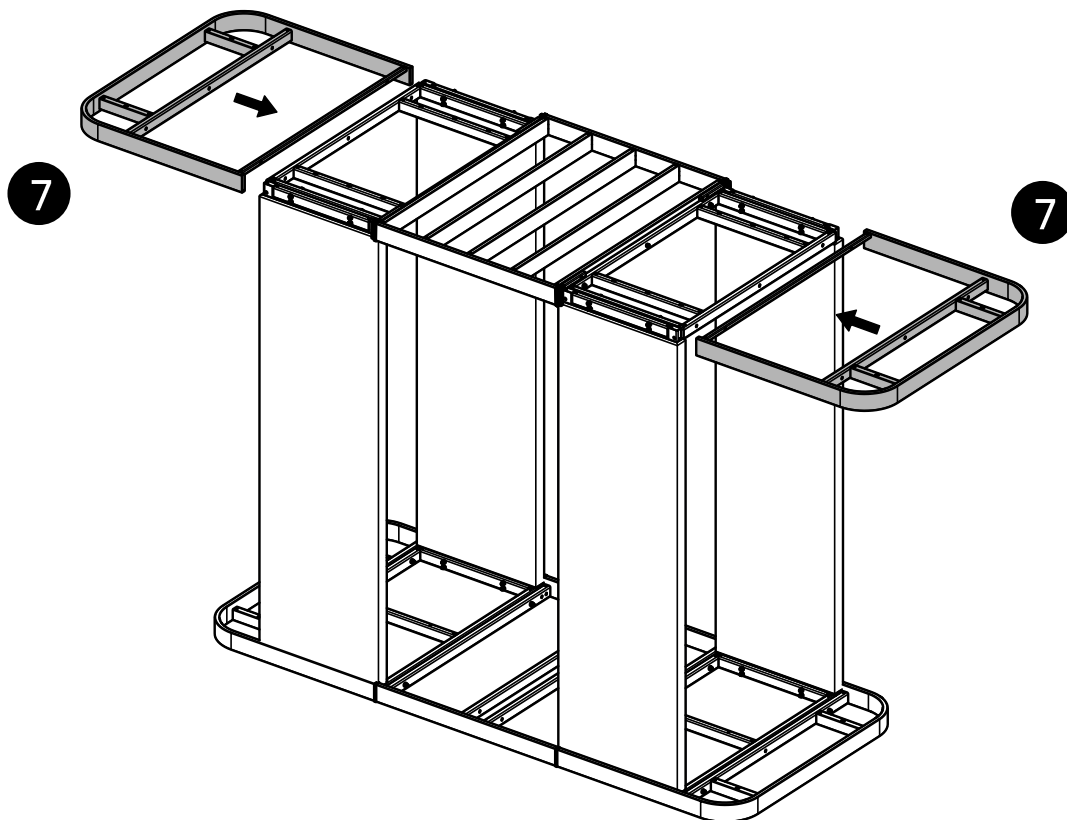 


17

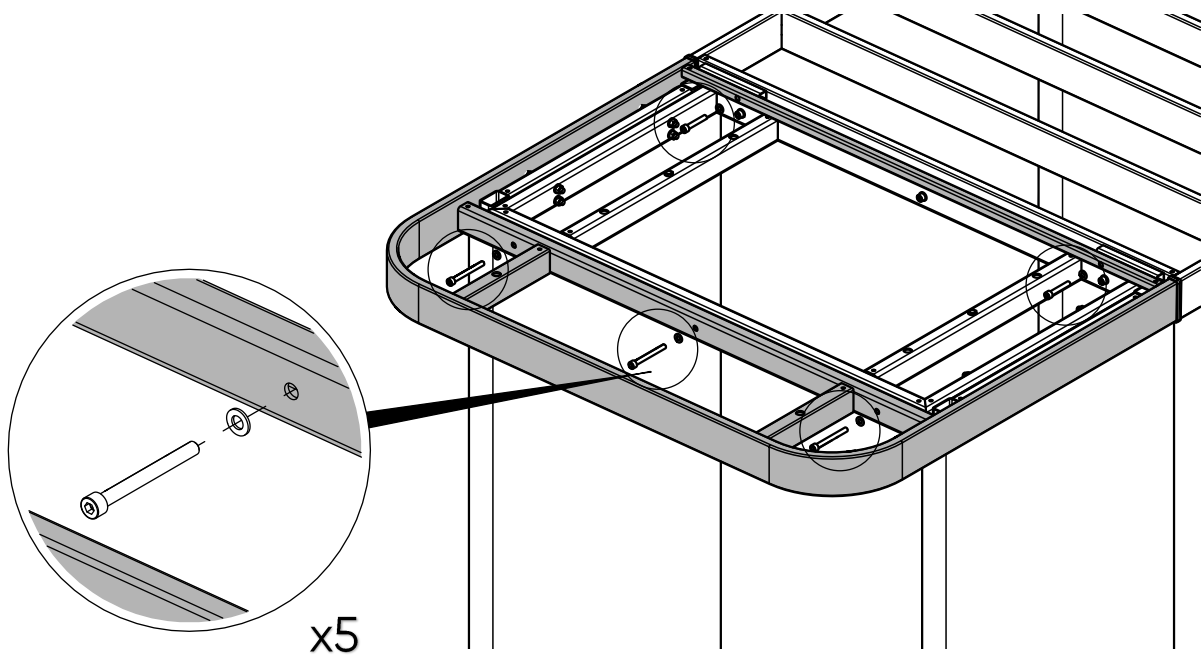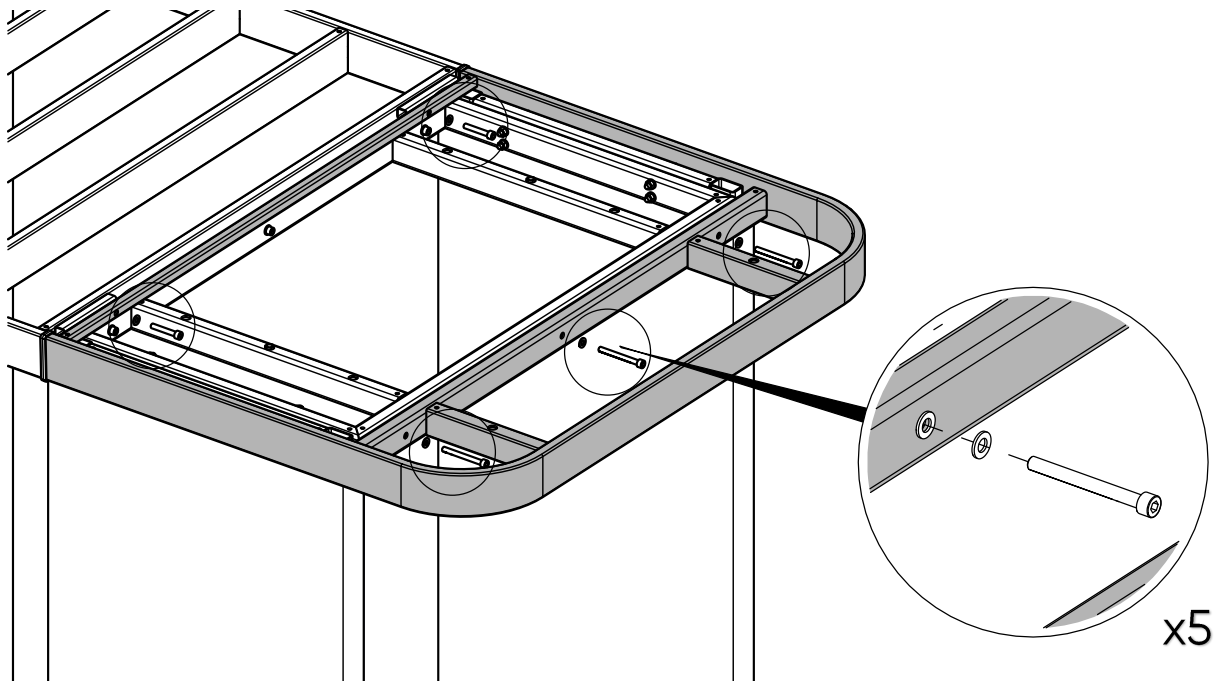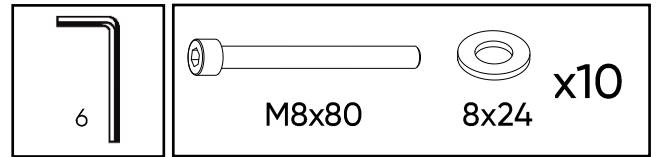   



18

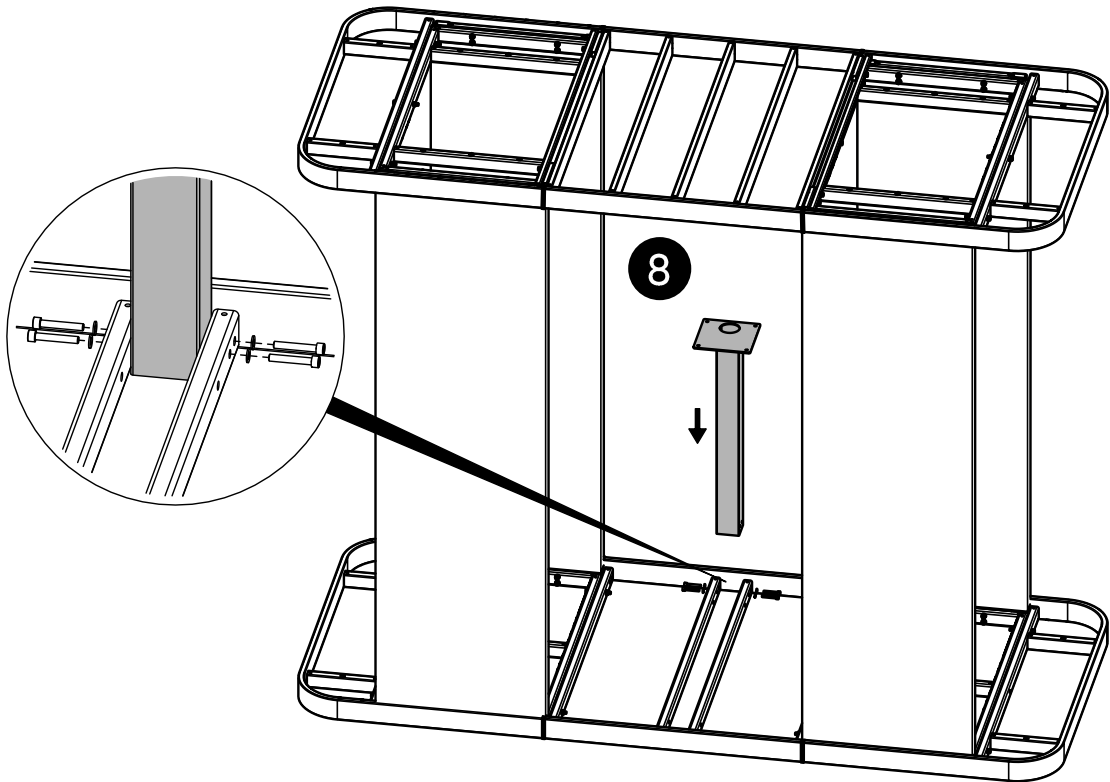 





19

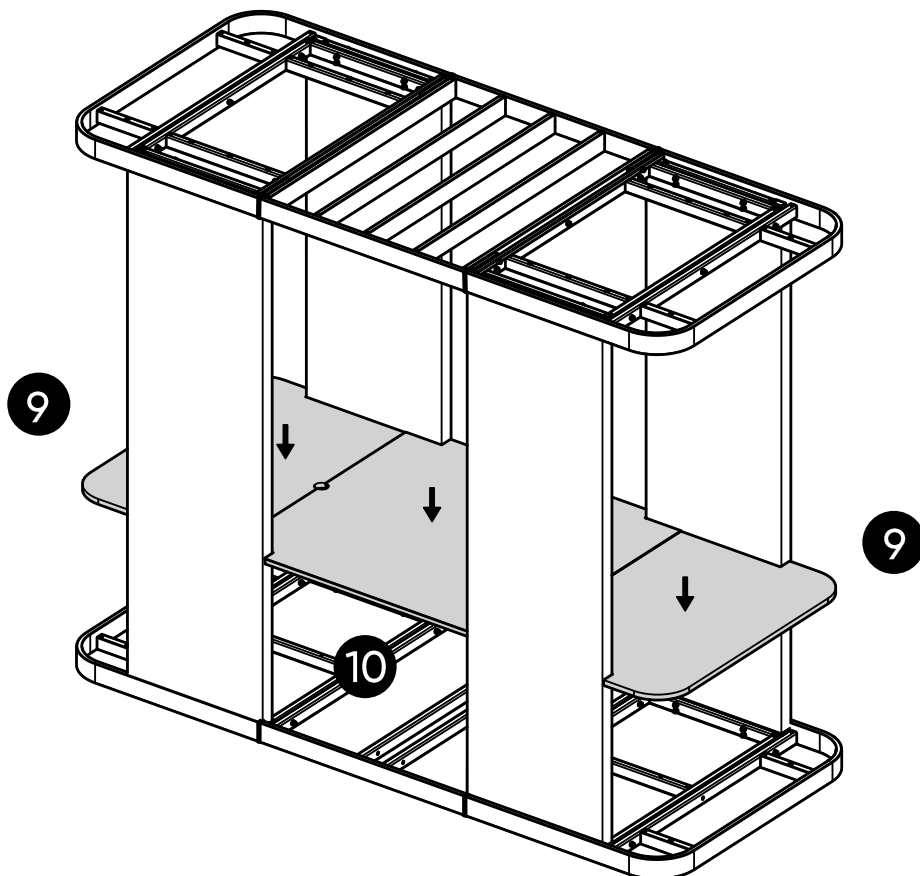 


20

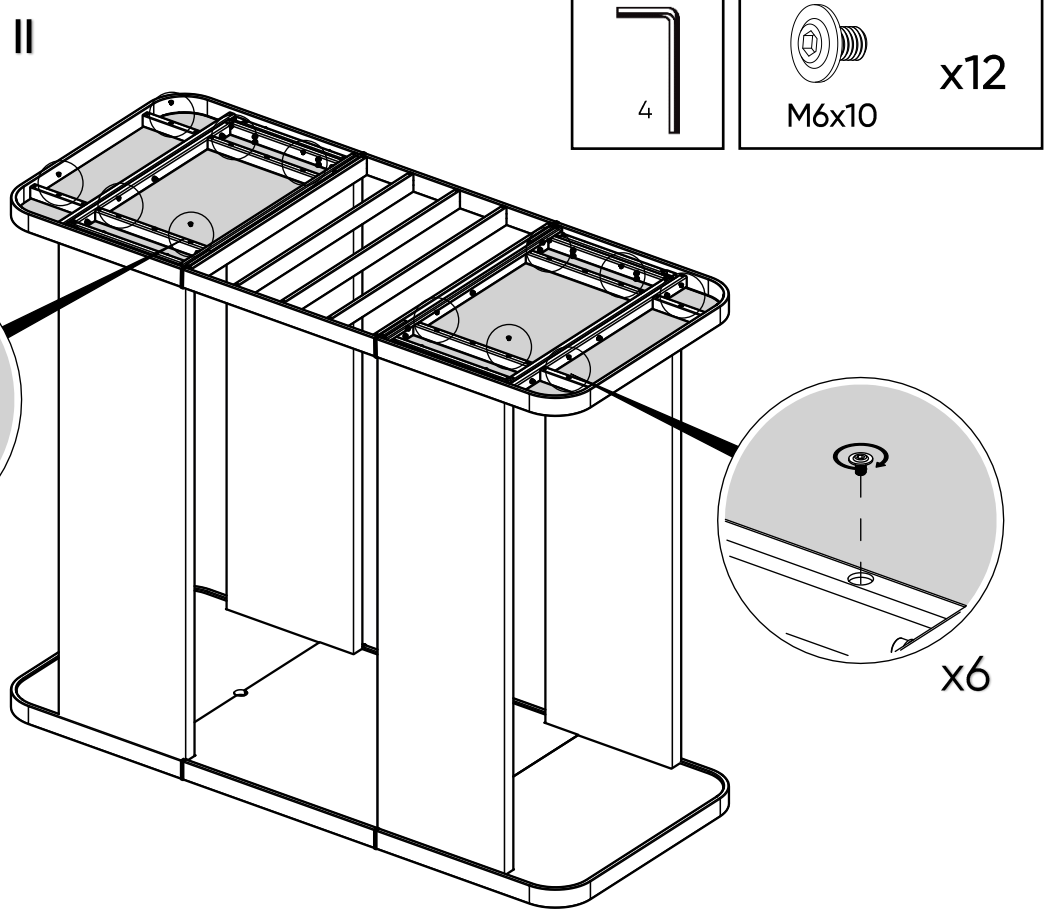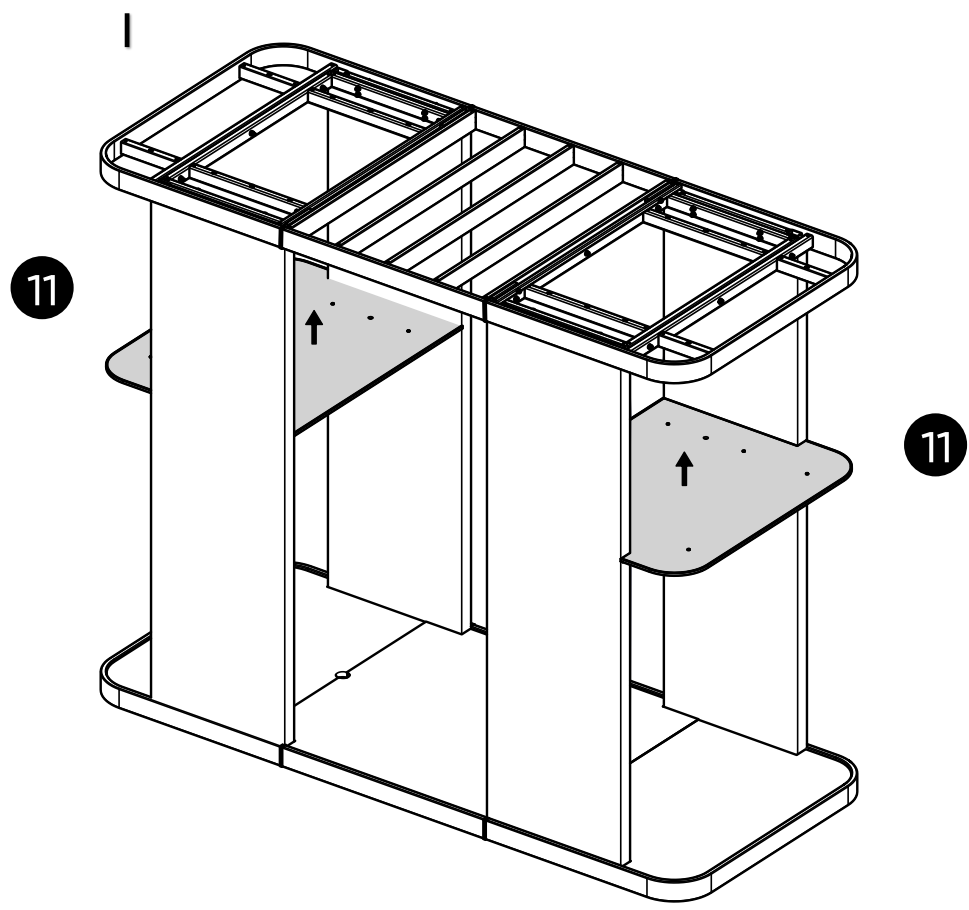  


21

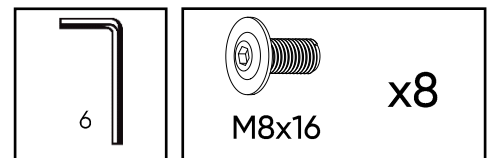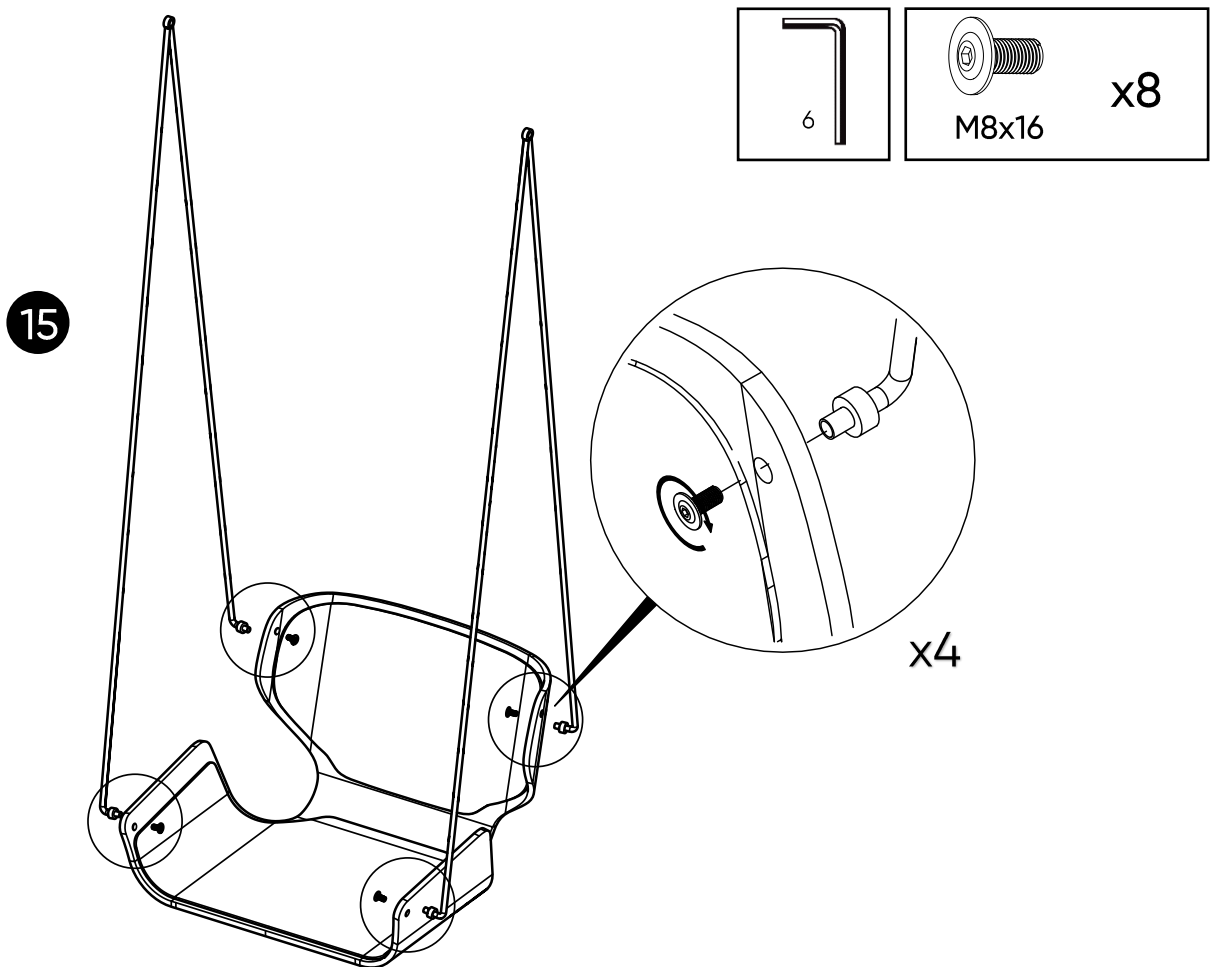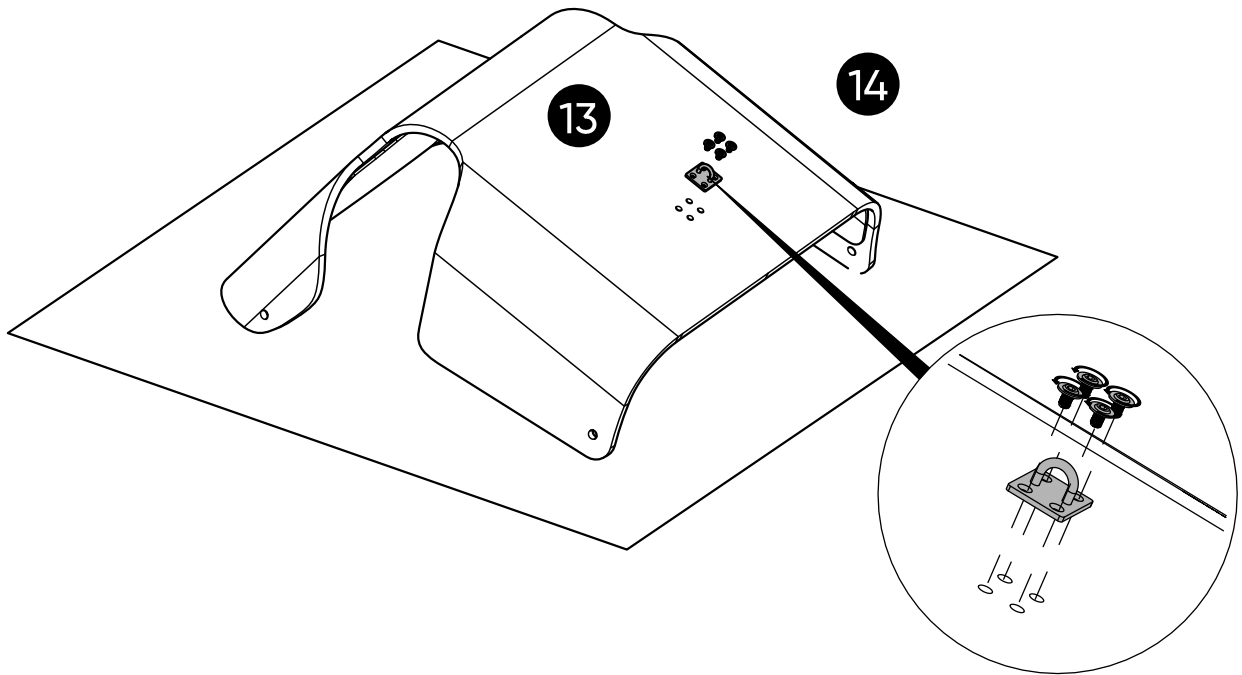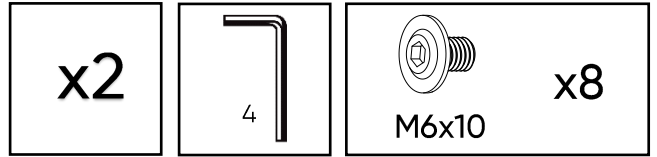    


22

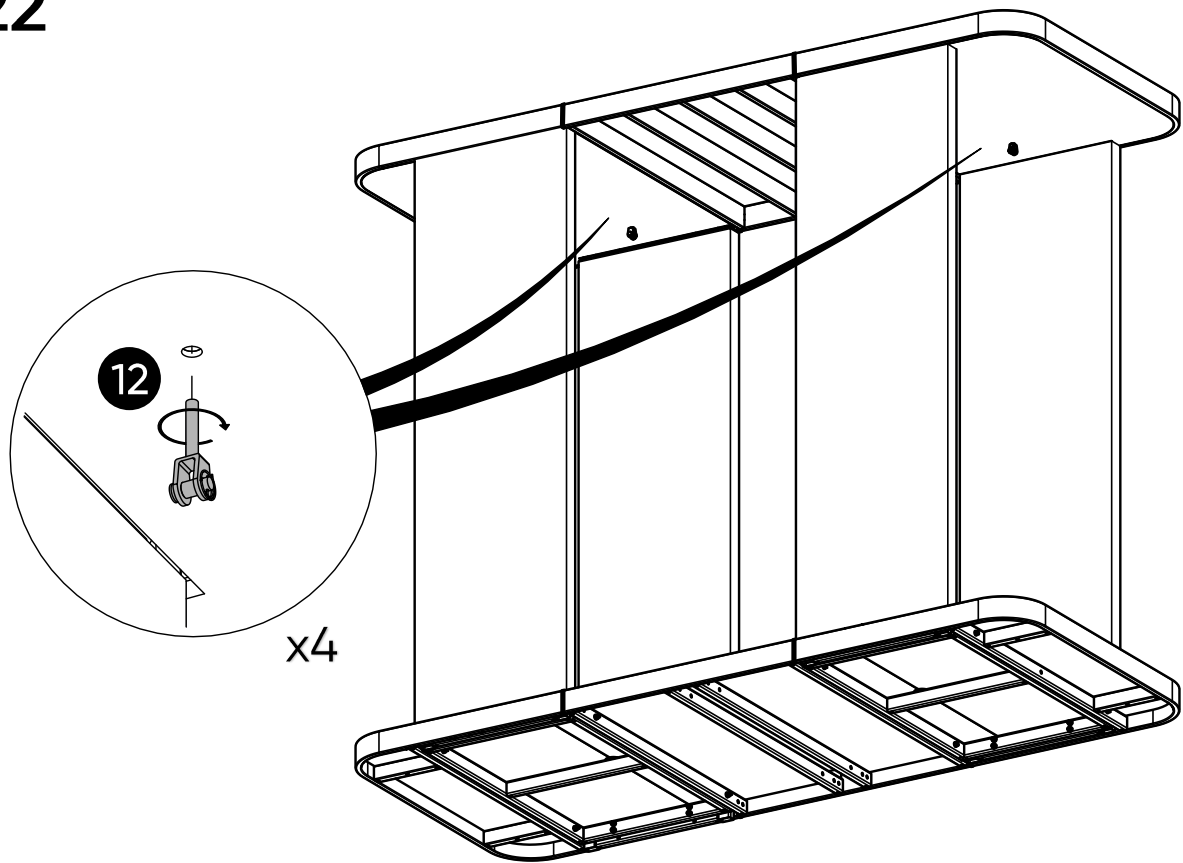 


23


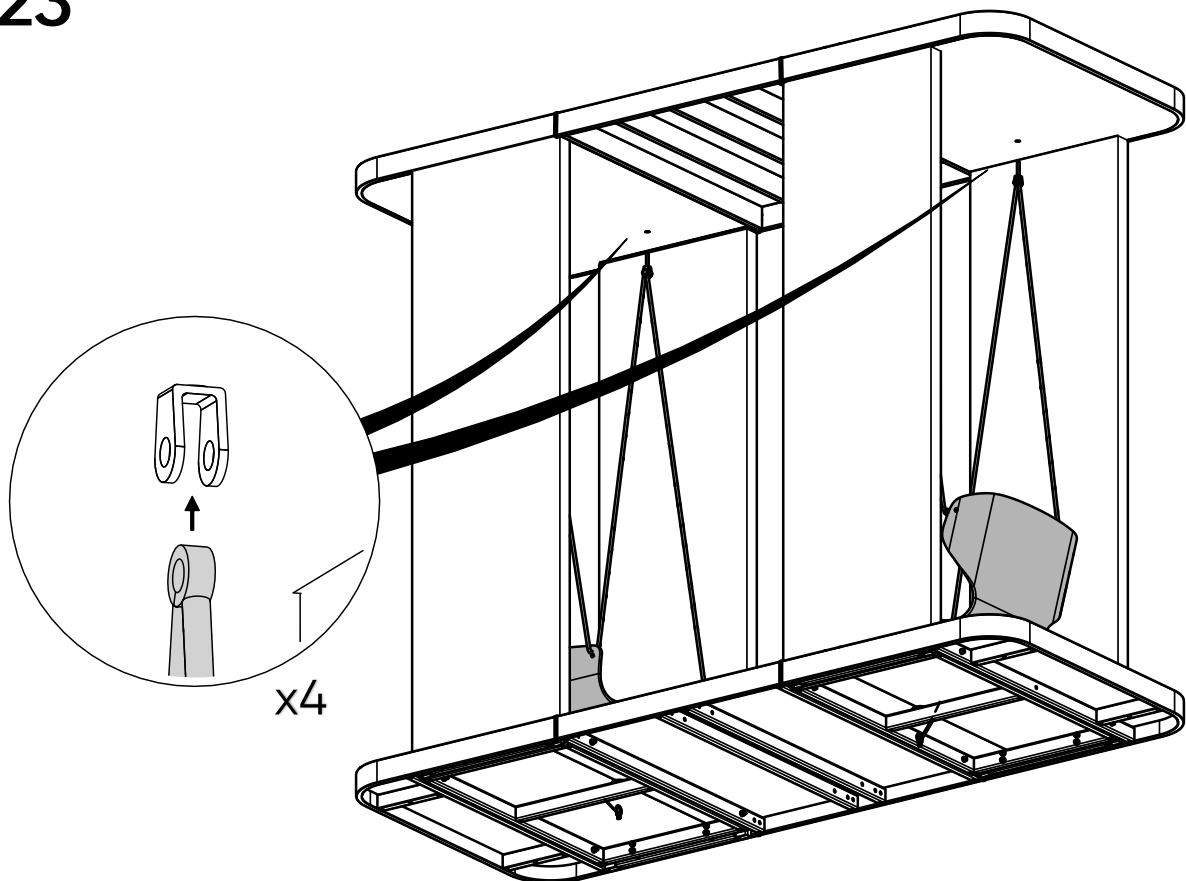 


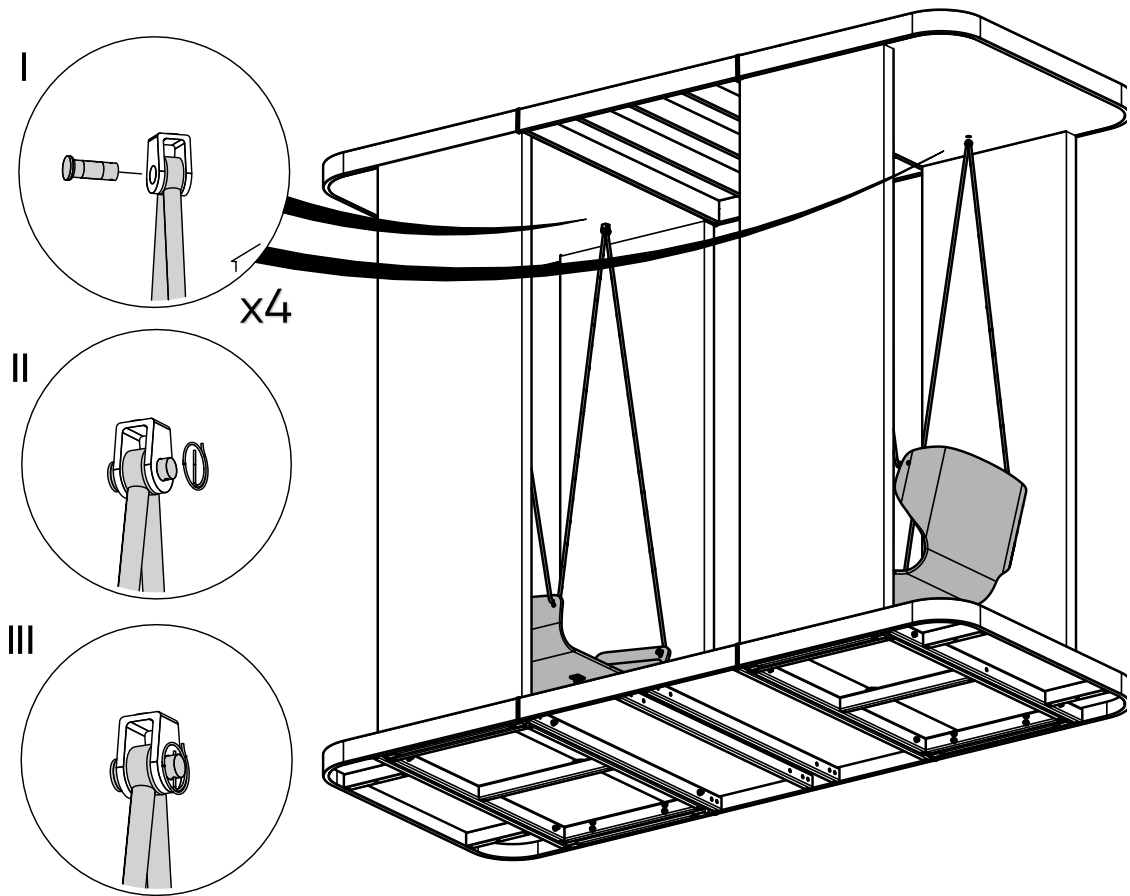 


24

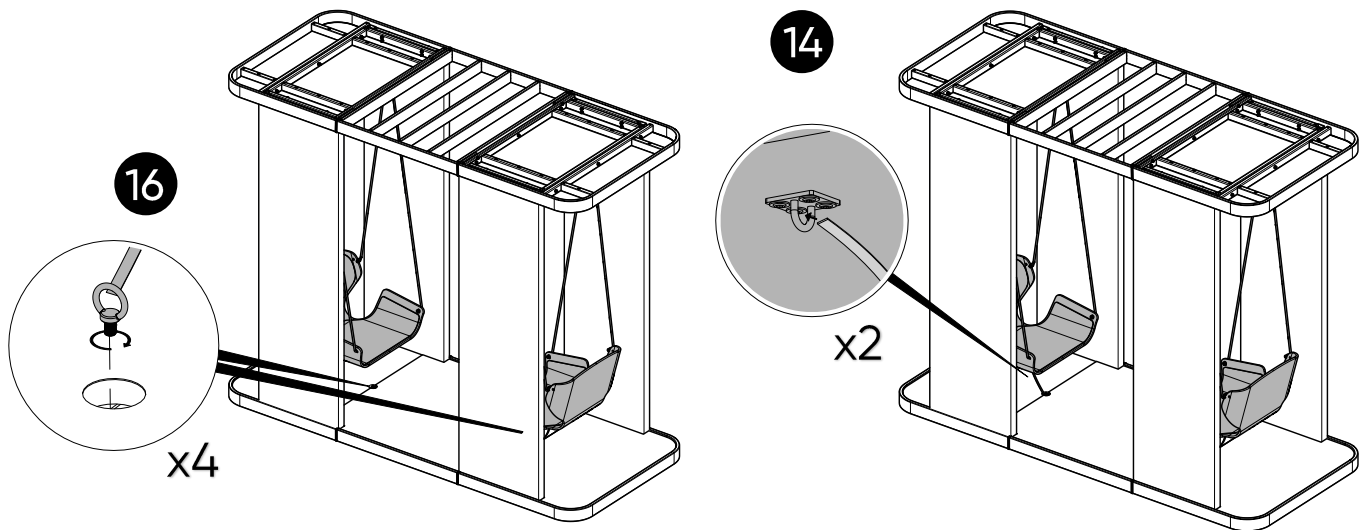 

25

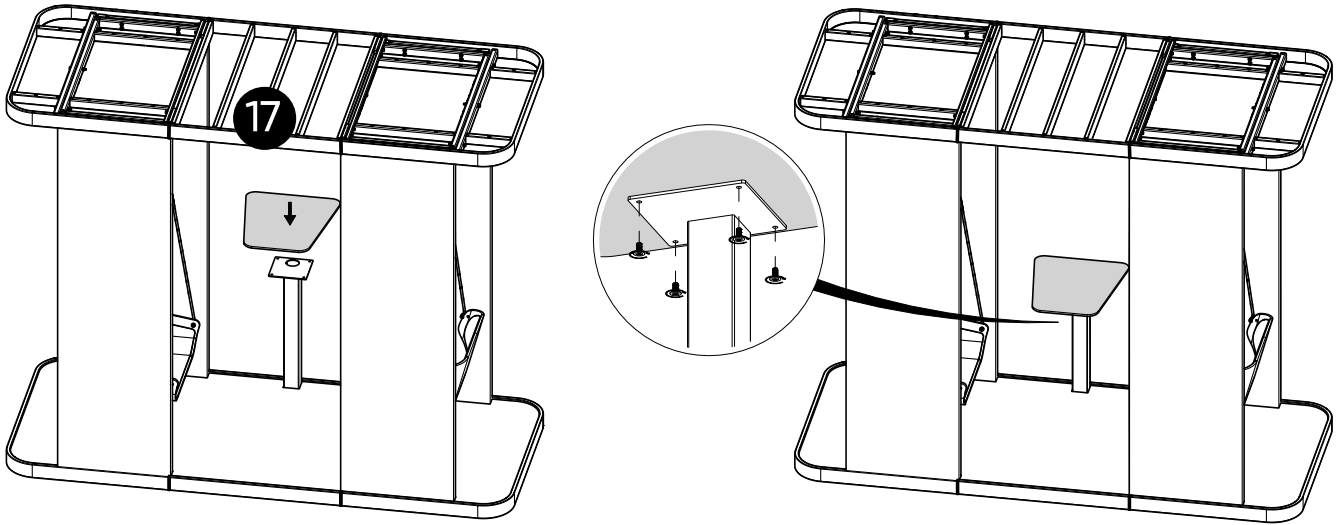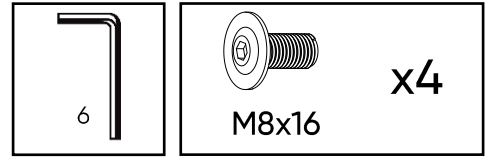  

26

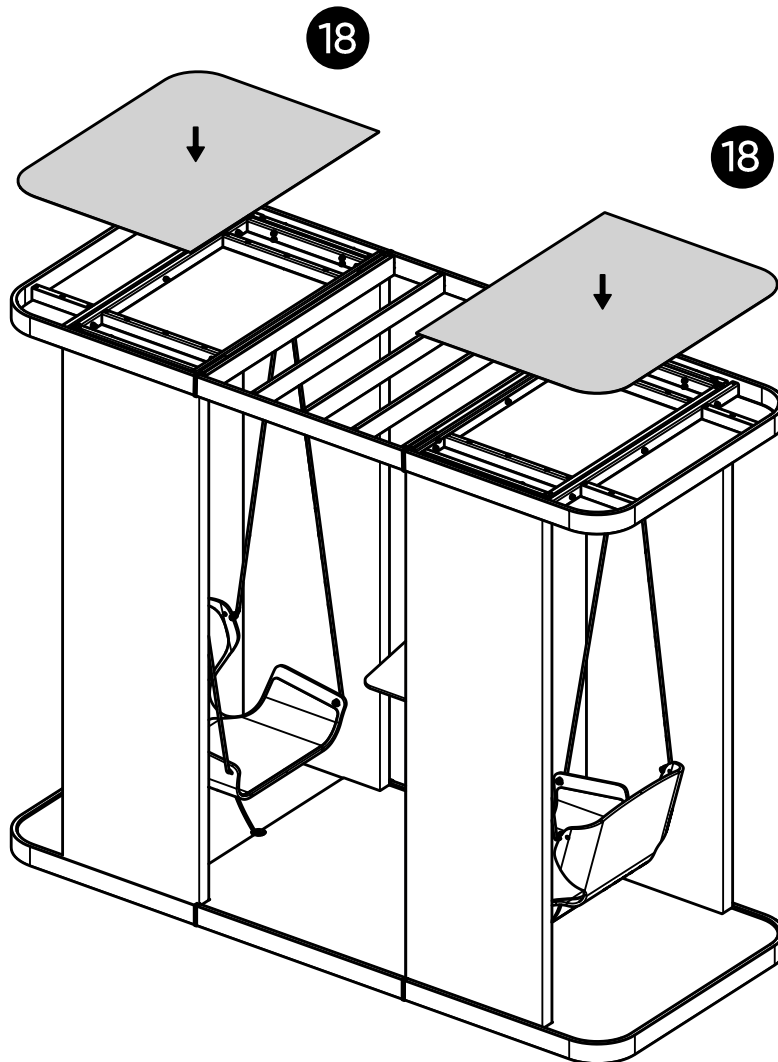 

Bejot Sp. z o. o.

ul. Wybickiego 2A, Manieczki, 63-112 Brodnica n. Poznania, POLAND

tel.: +48 (61) 281 22 25, e-mail: biuro@bejot.eu

www.bejot.eu

edition 11/2021